
# FAIRISLE PATTERN
## SELECTOR (1)


- **This example was knitted using "STITCH WORLD" Pattern No. 19.**




**Example: PATTERN PROGRAM**

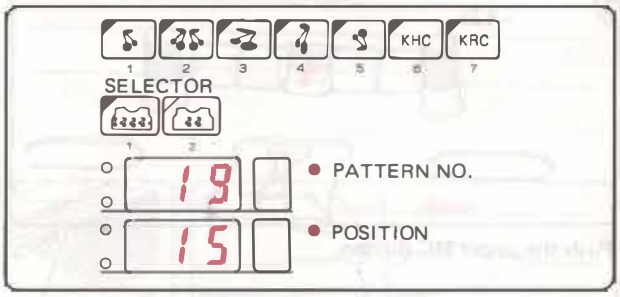



- **BEFORE STARTING PATTERN KNITTING**

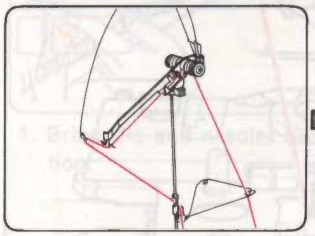


Thread the main yarn into the righthand Yarn Tension Unit.

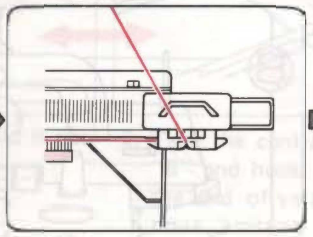

Cast on.

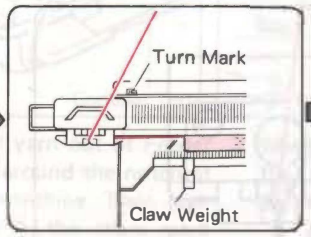



Knit a few rows in stocking stitch and place the K-Carriage outside the left Turn Mark. Hang the Claw Weight evenly along the Cast-on Comb.

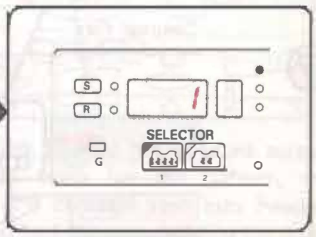



Program your pattern. (See p. 23.)


- **PATTERN KNITTING**

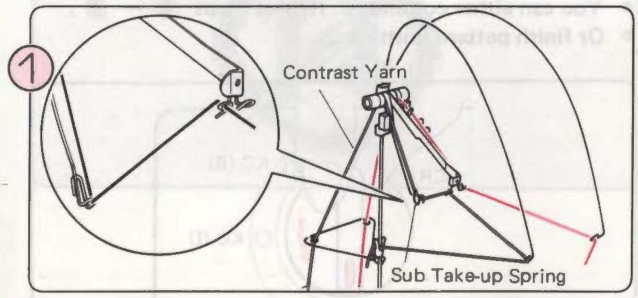


Thread the contrast yarn into the left Yarn Tension Unit, including the Sub Take-up Spring.

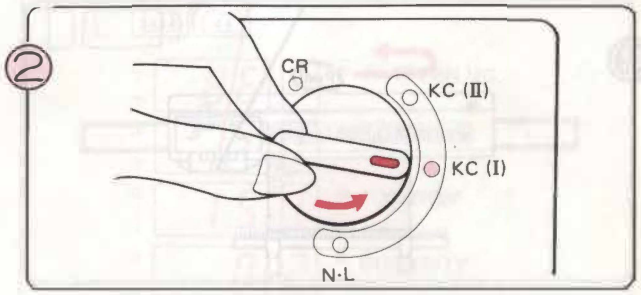



Set the Change Knob to KC (I).

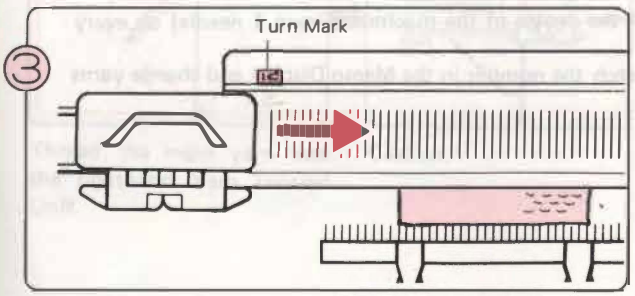



Move the K-Carriage from left to right across the left Turn Mark.


*You only need to operate the K-Carriage once across the Turn Mark when you start pattern knitting.

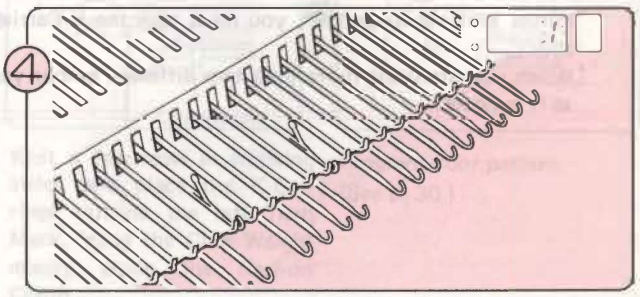



The needles are selected. Number 1 flashes on and off in the Display to tell you to knit the first row of the pattern.

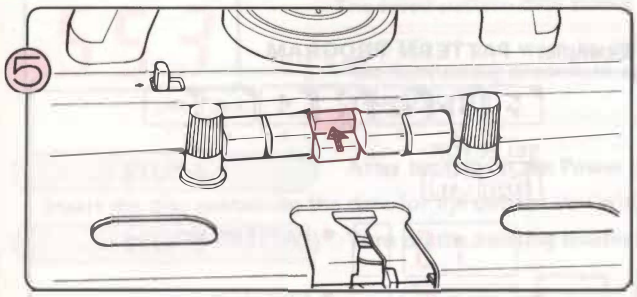


Push the upper MC Button.

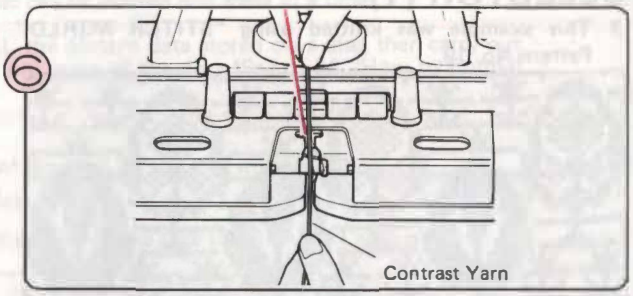



Thread the contrast yarn into Yarn Feeder "B" – there is no need to open the Yarn Feeder Lever when you do so.

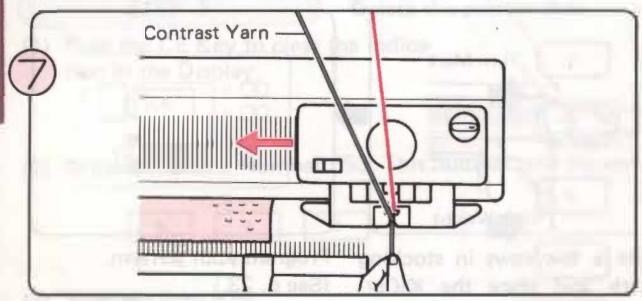


Holding the yarn end with your left hand, move the K-Carriage from right to left.

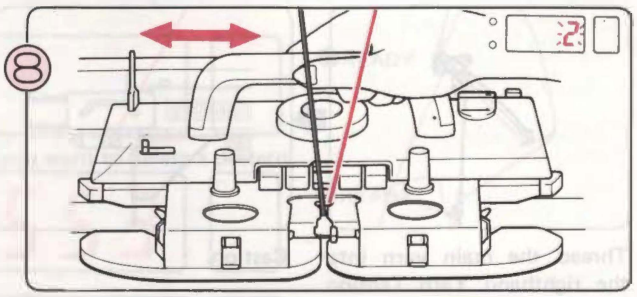


The Number 2 flashes on and off in the Display to tell you to knit the second row of the pattern. Move the K-Carriage to the right and then to the left. You are now knitting in Fairisle Pattern.

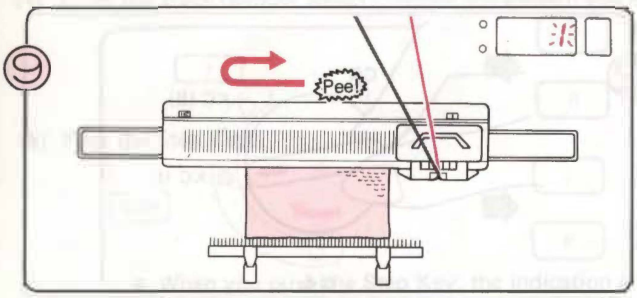


Knit in pattern until you hear the sound "Peel". Finish the row and knit one more row. Number 1 flashes on and off in the Display. You have now knitted one complete pattern in length.

- You can either continue ... Repeat Steps ⑧ – ⑨.
- **Or finish pattern knitting ...**

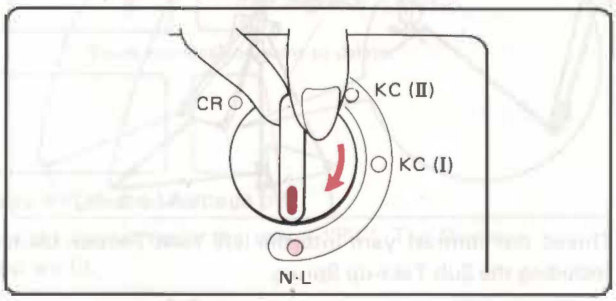



Set the Change Knob to N·L.
The Cam Button will be released automatically.

*Whilst knitting in pattern, you must take the K-Carriage past the centre of the machine (Green 1 needle) on every row.
*When you are using more than two different colour yarns, watch the number in the Memo Display and change yarns as it indicates.


- If there are any rows where you use only the main yarn (i.e. no contrast colour) ...




The end needles only will be selected to D position. When this happens, you should do the following:—

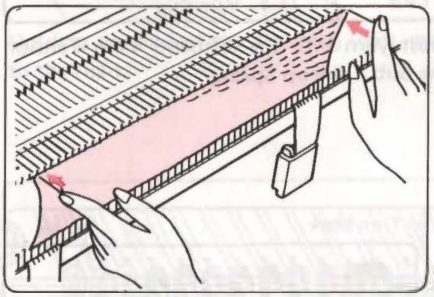

1. Bring the end needles back to B position.

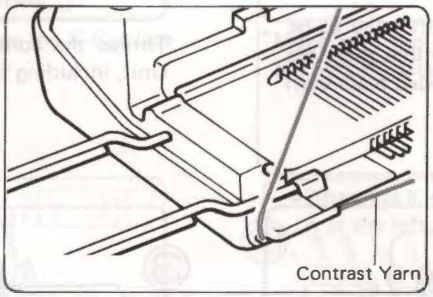


2. Take the contrast yarn out of Feeder "B" and hook it around the notch at the end of your machine. Then continue knitting with the main yarn only, bringing the end needles back to B position on each row.

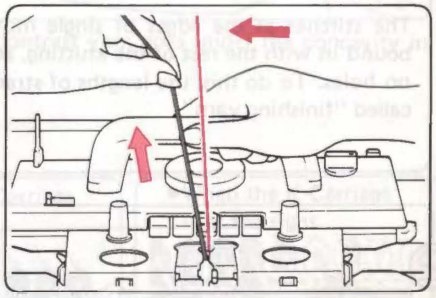


3. When the needles are selected across the row again for the pattern, re-thread the contrast yarn into Feeder "B" and knit the row, holding the contrast yarn as shown so that no loops form at the edges.

## SELECTOR (2)


**This example was knitted using "STITCH WORLD" Pattern No. 86.**




**Example: PATTERN PROGRAM**

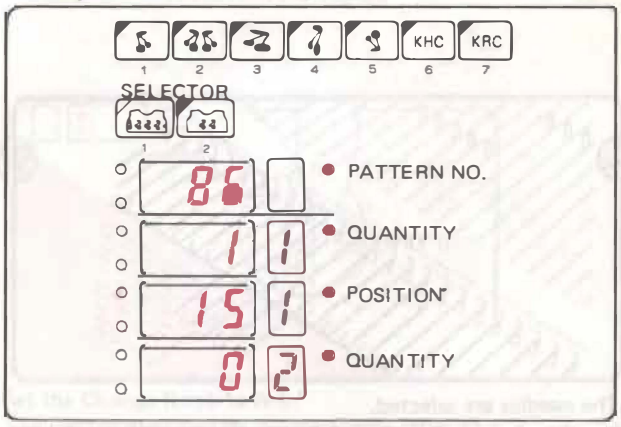



- **BEFORE STARTING PATTERN KNITTING**

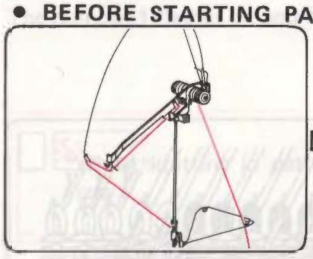


Thread the main yarn into the righthand Yarn Tension Unit.

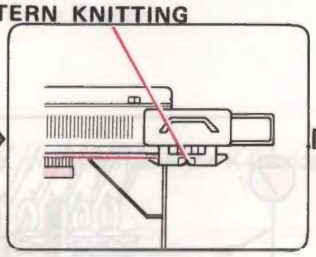

Cast on.

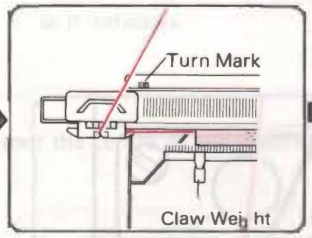



Knit a few rows in stocking stitch and place the K-Carriage outside the left Turn Mark. Hang the Claw Weight evenly along the Cast-on Comb.

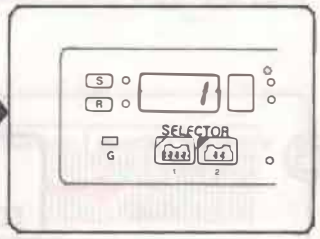



Program your pattern. (See p. 30.)

## • HOW TO KNIT SINGLE MOTIFS


Separate the main yarn in two.

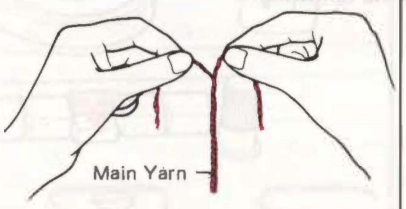



The stitches at the edges of single motifs need to be bound in with the rest of the knitting, so that there are no holes. To do this, use lengths of stranded main yarn called "finishing yarn".

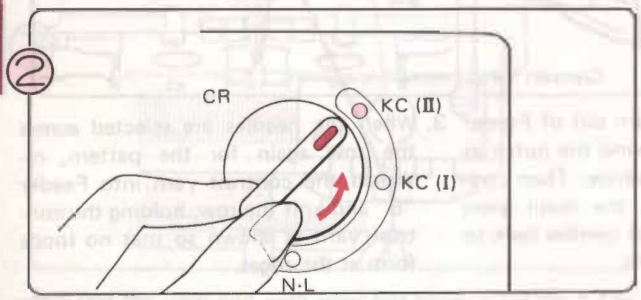


Set the Change Knob to KC (II).

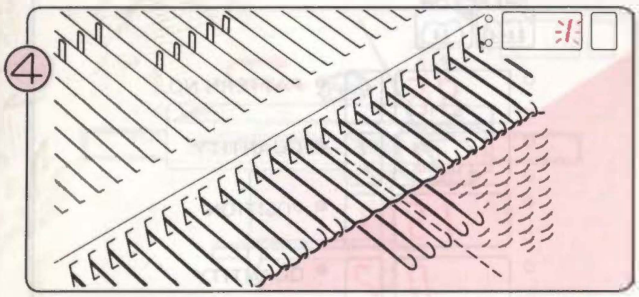



The needles are selected.
Number 1 flashes on and off in the Display to tell you to knit the first row of the pattern.

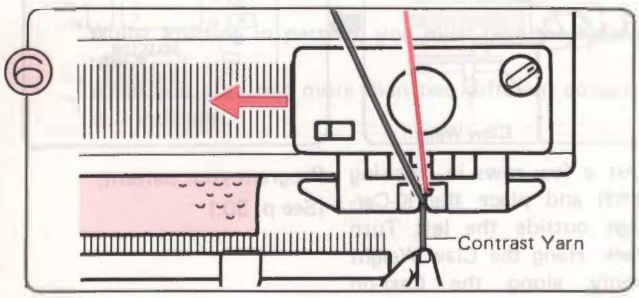



Thread the contrast yarn into Yarn Feeder "B" — there is no need to open the Yarn Feeder Lever when you do so. Move the K-Carriage from right to left.


## • PATTERN KNITTING

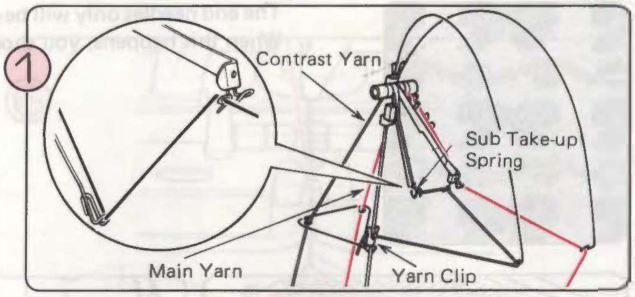



Thread the contrast yarn into the lefthand Yarn Tension Unit, including the Sub Take-up Spring.

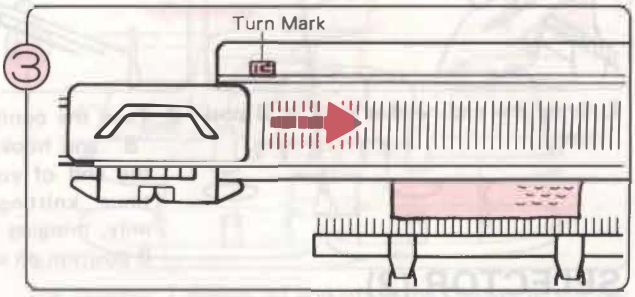


Move the K-Carriage from left to right across the left Turn Mark.
*You only need to operate the K-Carriage once across the Turn Mark when you start pattern knitting.

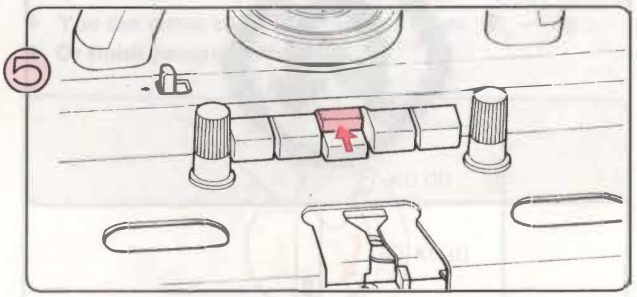



Push the upper MC Button.

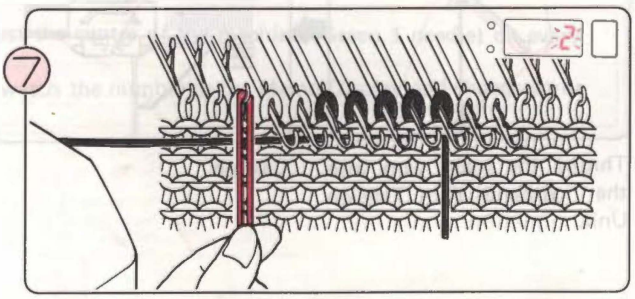



Fold a separate piece of finishing yarn in half, and place it over the needle adjacent to the last selected needle at the left.

8

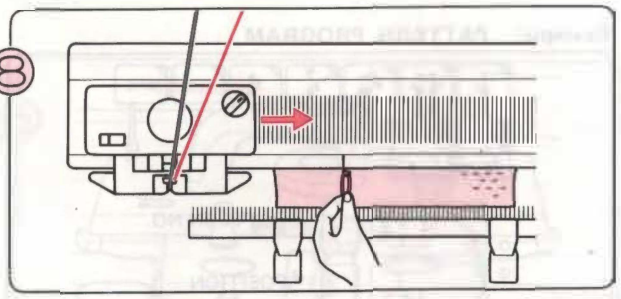


Holding the end of the finishing yarn, move the K-Carriage to the right.

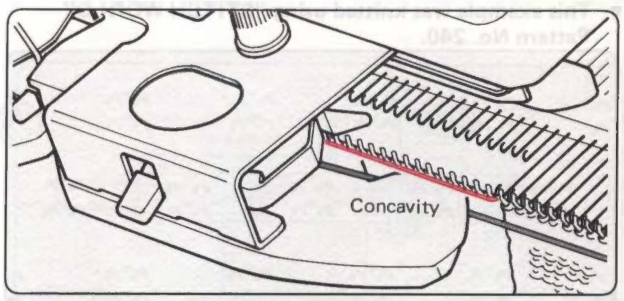



*Make sure the contrast yarn goes under the concavity in the Sinker Plate.

9

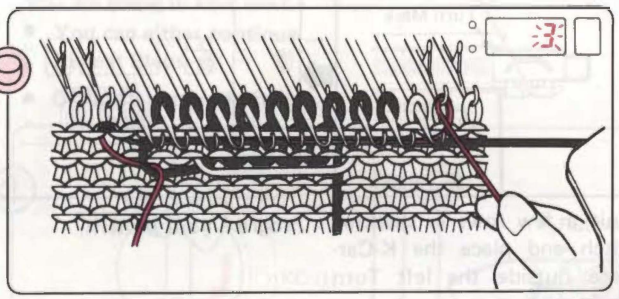


Take one end of the finishing yarn under the selected needles, and wrap it from right to left round the needle adjacent to the last selected needle on the right. (See illustration.) Holding the end of the finishing yarn, move the K-Carriage from right to left.

10

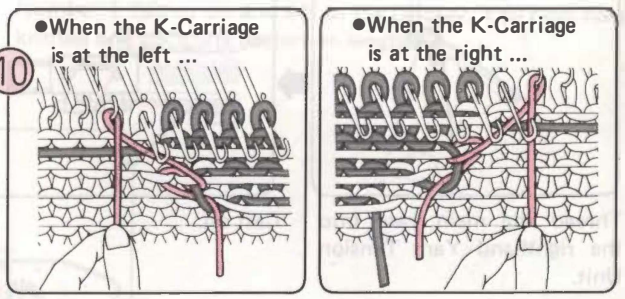



Wrap the finishing yarn around the hook of the needle adjacent to the first selected needle, and pull down gently.

11

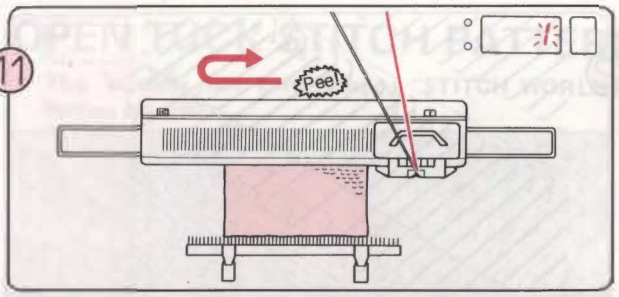


Knit in pattern until you hear the sound "Peel". If you are operating the K-Carriage from right to left when you hear the sound, finish that row and knit one more row.
The number 1 flashes on and off in the Display.

12

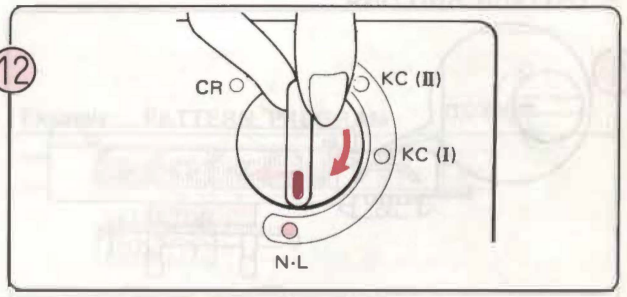


Set the Change Knob to N·L.
The Cam Button will be automatically released.
*When you are using more than two different colour yarns, watch the number in the Memo Display and change yarns as it indicates.

*Whilst knitting in pattern, you must take the K-Carriage past the centre of the machine (Green 1 needle) on every row.