
LACE PATTERN AND FINE LACE PATTERN


SELECTOR 1

- **LACE PATTERN**

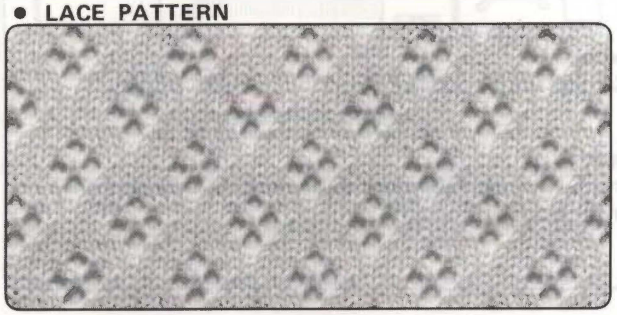


This example was knitted using "STITCH WORLD" Pattern No. 106.

Example: PATTERN PROGRAM

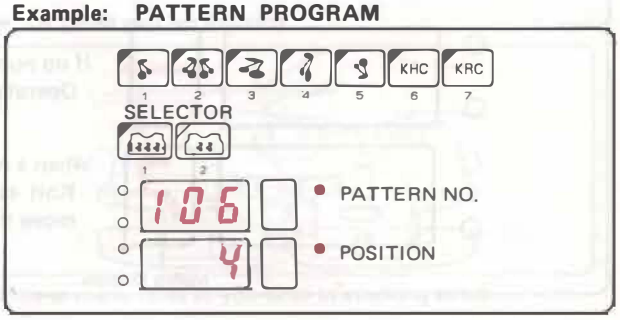


FINE LACE PATTERN

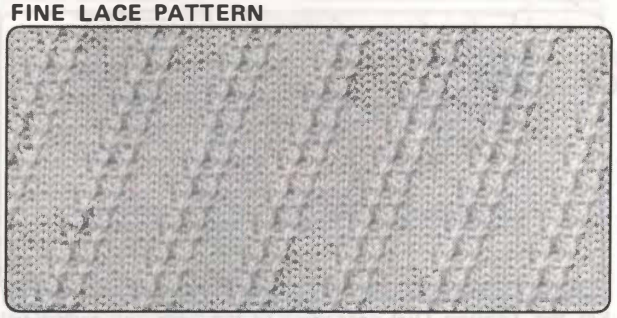


This example was knitted using "STITCH WORLD" Pattern No. 206.

Example: PATTERN PROGRAM

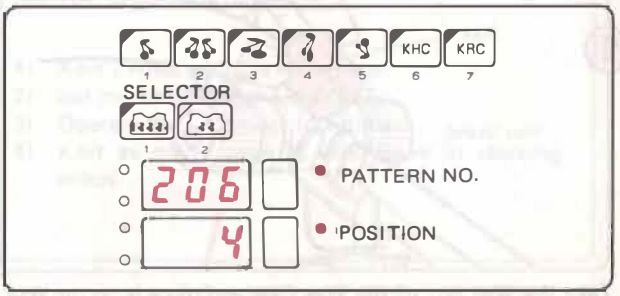

You must use the Lace Carriage (L-Carriage) for Lace or Fine Lace Pattern.


The methods for knitting Lace and Fine Lace Patterns are identical except the setting of the Lace Change Lever is different.

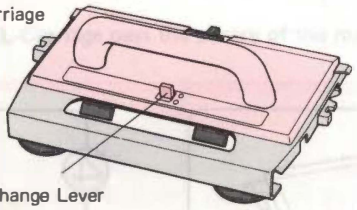


APPROXIMATE TENSION CHART

Very fine yarn	4—5
Fine Yarn	4—5
Medium yarn	5—6


- **HOW TO SET THE L CARRIAGE**

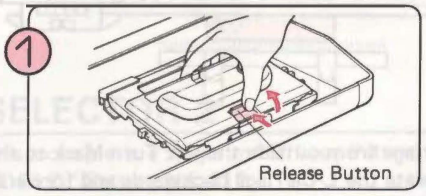

Remove the L-Carriage by pushing the Release Button.

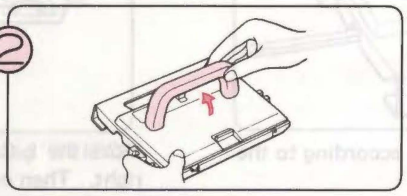


Raise the L-Carriage Handle.

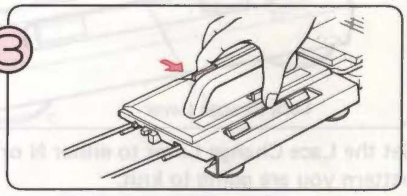


Push the Release Button and place the L-Carriage securely on the left Extension Rail.


- **BEFORE STARTING PATTERN KNITTING**

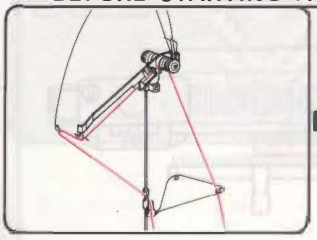


Thread the main yarn into the righthand Yarn Tension Unit.

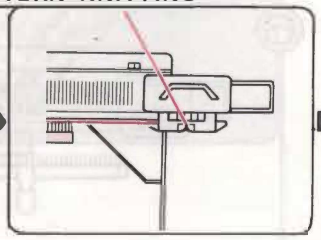

Cast on.

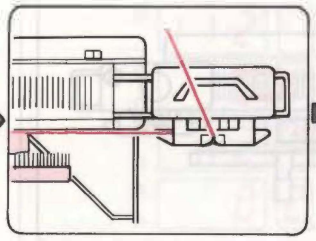


Knit a few rows in stocking stitch and place the K-Carriage on the righthand Extension Rail. Hang the Claw Weight evenly along the Cast-on Comb.

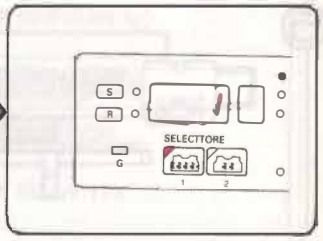

Program your pattern. (An example is given). (See p. 23.)


• PATTERN KNITTING

Use either the L-Carriage or the K-Carriage according to the Memo Display when knitting Lace or Fine Lace Patterns.

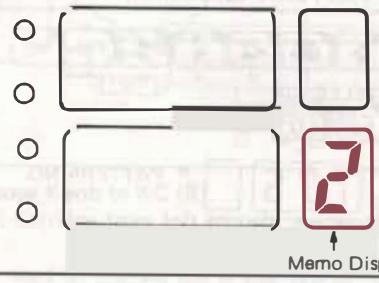


If no number appears:
Operate the L-Carriage until a number shows in the Memo Display.


When a number appears:
Knit as many rows with the K-Carriage as the number indicates, then move the L-Carriage from left to right.

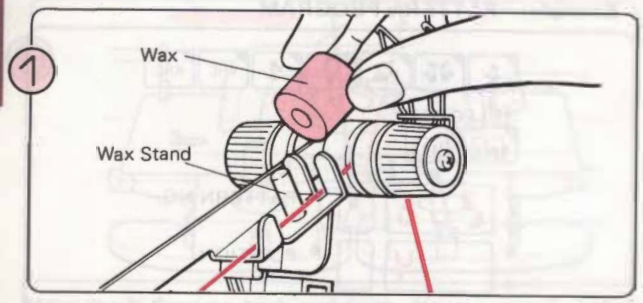


Take the Wax out of the Wax Case and place it on the Wax Stand.
*You need to use the Wax when you are knitting Lace or Fine Lace Patterns.

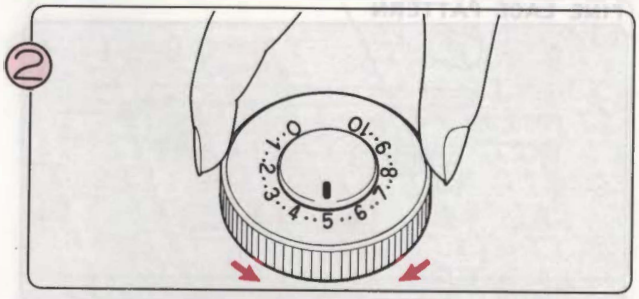


Set the Tension Dial according to the yarn you are using. (Refer to the Approximate Tension Chart on page 100.)

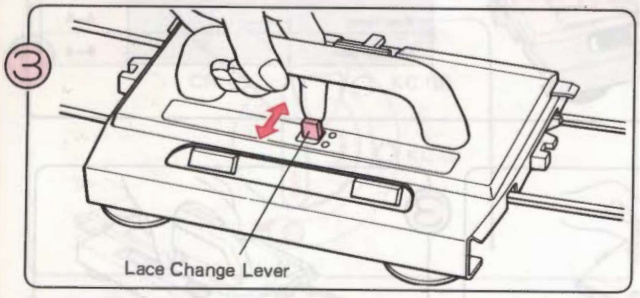


Set the Lace Change Lever to either N or F according to the pattern you are going to knit.
N — Normal Lace Pattern
F — Fine Lace Pattern

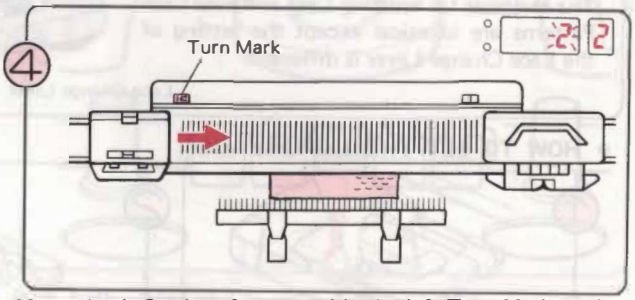


Move the L-Carriage from outside the left Turn Mark to the right. Then operate the L-Carriage backwards and forwards across the knitting until the number 2 appears in the Memo Display.
*You only need to operate the L-Carriage once across the Turn Mark when you start pattern knitting.

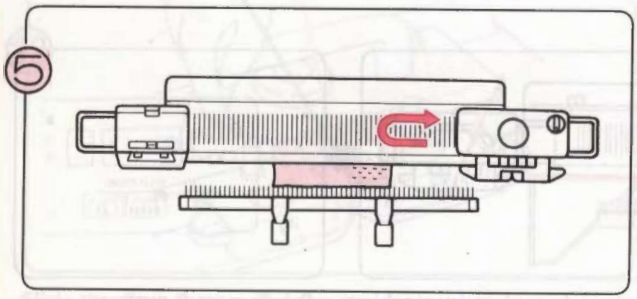

Knit two rows with the K-Carriage.

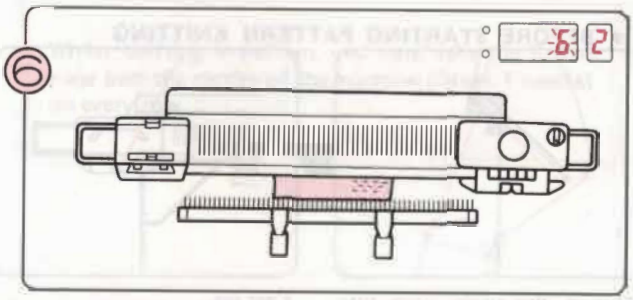


Operate the L-Carriage until a number appears in the Memo Display.
Operate the K and L-Carriages according to the Memo Display.

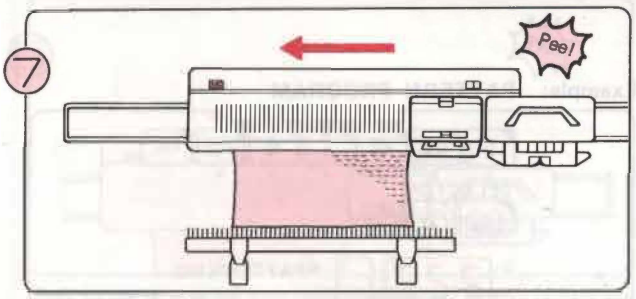


Knit in pattern until you hear the sound "Peep!". If you are operating the L-Carriage when you hear the sound, finish that row.

- **You can either continue:**
  Repeat Steps ⑥ – ⑦ .
- **Or finish pattern knitting ...**

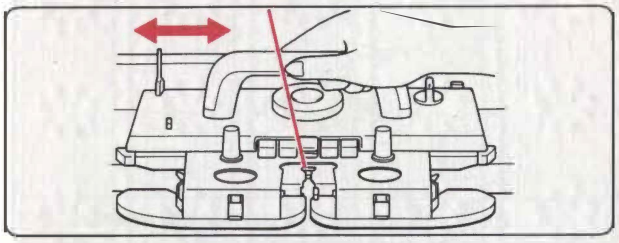

Knit as many rows as you wish in stocking stitch.

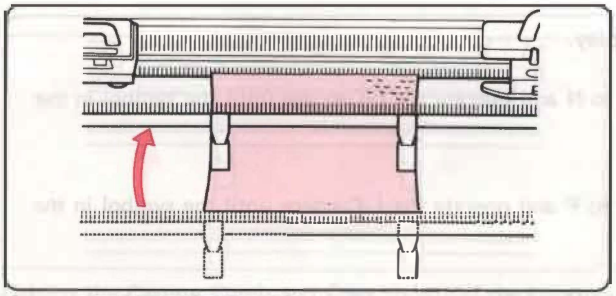

Rehang the Cast-on Comb and Claw Weights if the knitting becomes too long.
* Should the knitting lift, pull it down with your other hand whilst you knit.

When you finish knitting "STITCH WORLD" Pattern No. 104, proceed as follows:–

1) Knit 2 rows with the K-Carriage.
2) Set the Lace Change Lever to F.
3) Operate the L-Carriage four times.
4) Knit as many rows as you desire in stocking stitch.


Whilst knitting in pattern, you must take the L-Carriage past the centre of the machine (Green 1 needle) on every row.

SELECTOR 2

This example is a single motif Lace Pattern using "STITCH WORLD" Pattern No. 112.
(You can also knit Fine Lace Patterns in the same way.)




Example: PATTERN PROGRAM

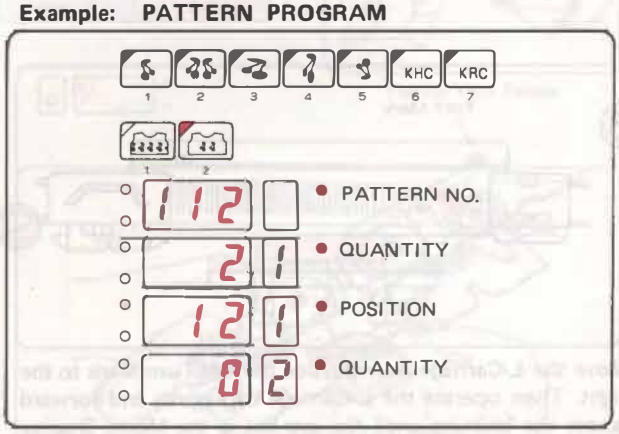


The procedure is the same as that for Selector (1) so refer to page 100.
(When programming the pattern, refer to page 30.)

LACE AND FINE LACE MIXED

- This example was knitted using "STITCH WORLD" Pattern No. 222.

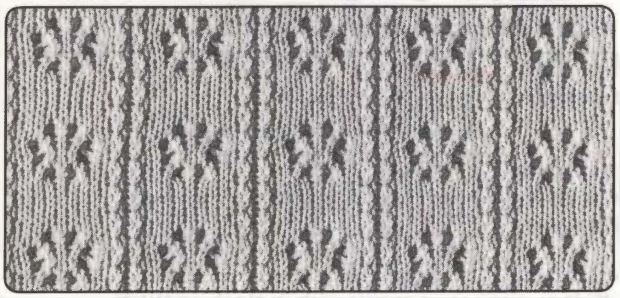


Example: PATTERN PROGRAM

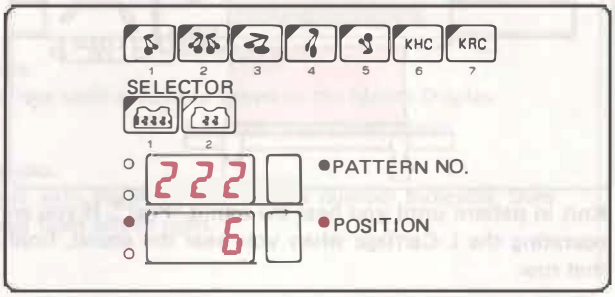

- PATTERN KNITTING


Use the L-Carriage and the K-Carriage as indicated in the Memo Display.

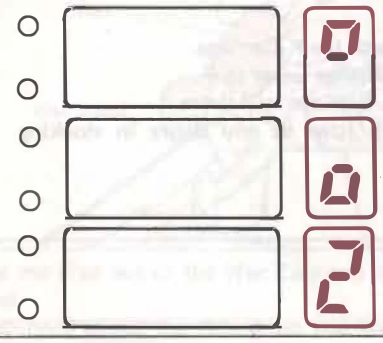


Set the Lace Change Lever to N and operate the L-Carriage until the symbol in the Memo Display changes.

Set the Lace Change Lever to F and operate the L-Carriage until the symbol in the Memo Display changes.


When a number appears in the Memo Display ...
Knit as many rows with the K-Carriage as the number indicates, and then move the L-Carriage from left to right.

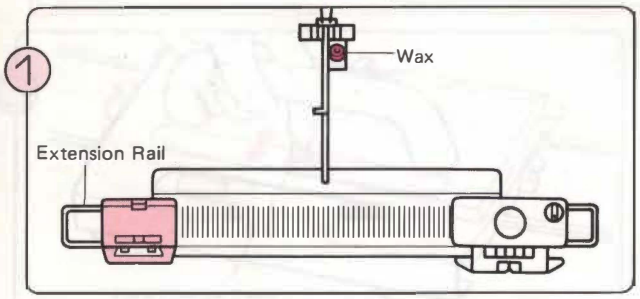

Set the L-Carriage by referring to page 100 and follow Steps on page 100 and Steps ① – ② on page 101.

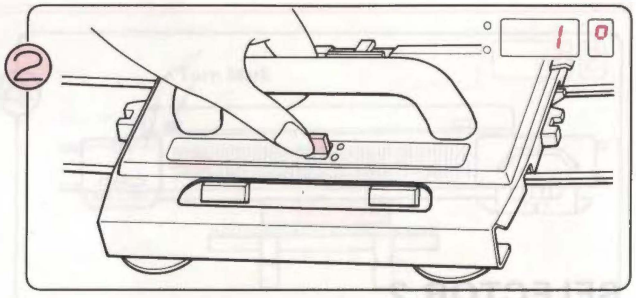


Set the Lace Change Lever to N which corresponds to the symbol " 0 " in the Memo Display.

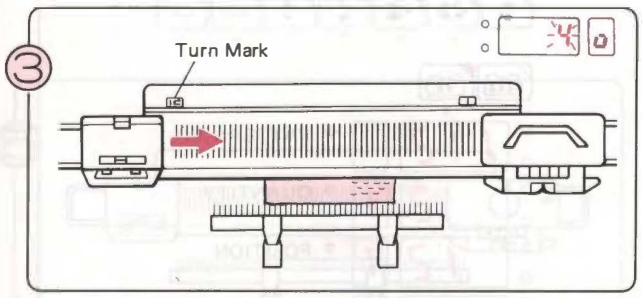


Move the L-Carriage from outside the left Turn Mark to the right. Then operate the L-Carriage backwards and forward across the knitting until the symbol in the Memo Display changes.

*You only need to operate the L-Carriage once across the Turn Mark when you start pattern knitting.

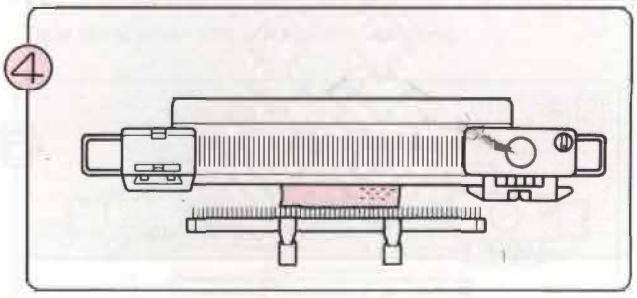


Operate the K and L Carriages according to the Memo Display.

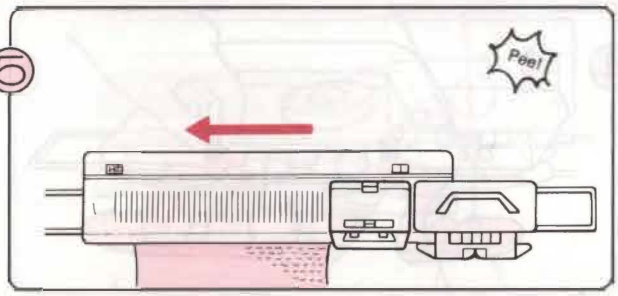


Knit in pattern until you hear the sound "Peel". If you are operating the L-Carriage when you hear the sound, finish that row.

- **You can either continue:**
  Repeat Steps ④ – ⑤ .
- **Or finish pattern knitting ...**

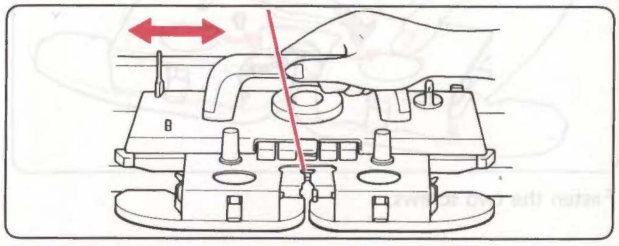

Knit as many rows as you wish in stocking stitch.

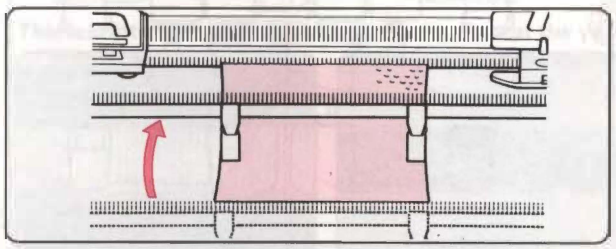

Rehang the Cast-on Comb and Claw Weights if the knitting becomes too long.

*Should the knitting lift, pull it down with your other hand whilst you knit.


Whilst knitting in pattern, you must take the L-Carriage past the centre of the machine (Green 1 needle) on every row.

PLATING


With the Plating Yarn Feeder, you can use two yarns to knit a reversible fabric, with one colour on the right side and the other on the wrong side. The main yarn will be on the front (plain) side of the knitting and the plating yarn will be on the reverse (purl) side.

The setting for the K-Carriage is the same as for stocking stitch.

Prepare your two yarns – use fine or very fine yarn.

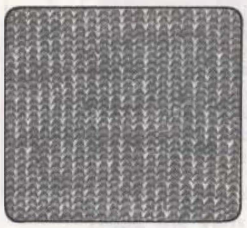


Front (Plain)

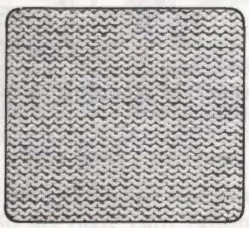


Reverse (Purl)

APPROXIMATE TENSION CHART

MAIN YARN	PLATING YARN	TENSION DIAL
Very fine	Veryfine	4–5
Fine	Very fine	6–7
Fine	Fine	8–9

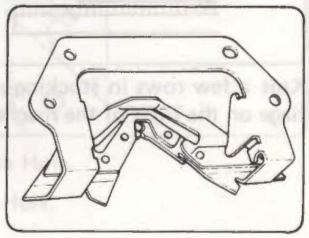


Plating Yarn Feeder

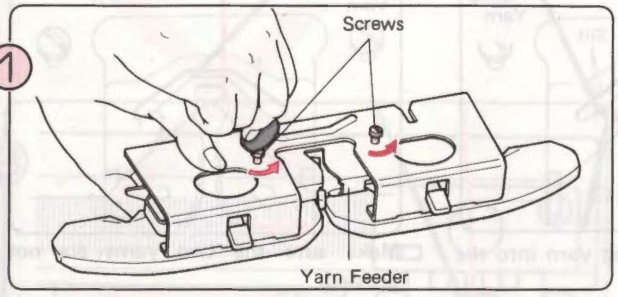

Remove the two screws and the Yarn Feeder from the Sinker Plate Assembly.

*Be sure to keep the screws safely !.

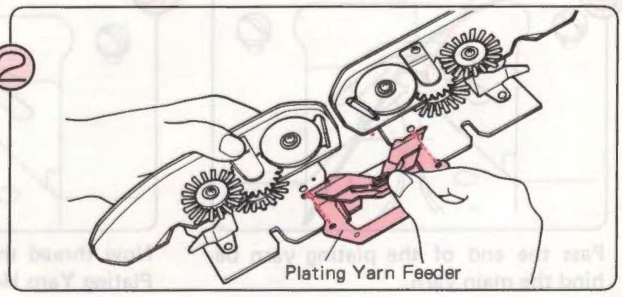

Take the Plating Yarn Feeder out of the Accessory Box and fit it into the Sinker Plate Assembly as shown above.