

- **You can either continue ...**
  Repeat Steps ⑨ – ⑩ .
- **Or finish pattern knitting ...**

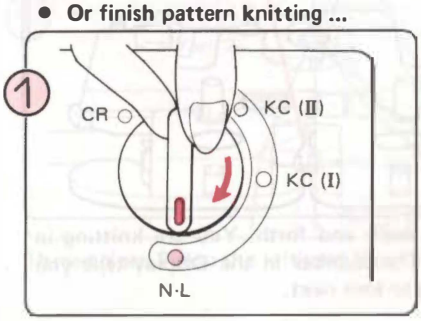

Set the Change Knob to N·L.
The Cam Buttons will be released automatically.

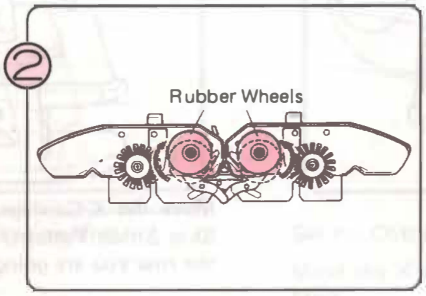

Place the Rubber Wheels in non-working position.


Whilst knitting in pattern, you must take the K-Carriage past the centre of the machine (Green 1 needle) on every row.

SKIP STITCH PATTERN


- **This example was knitted using "STITCH WORLD" Pattern No. 363.**




Example: PATTERN PROGRAM

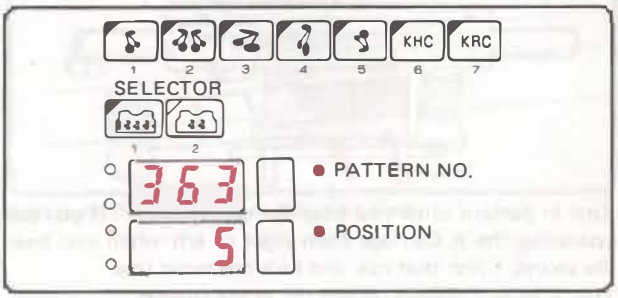


- **BEFORE STARTING PATTERN KNITTING**

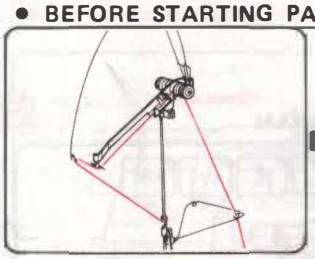


Thread the main yarn into the righthand Yarn Tension Unit.

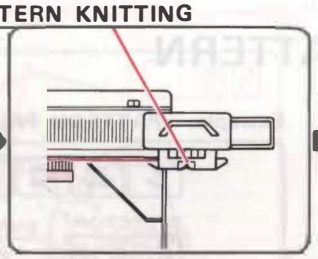

Cast on.

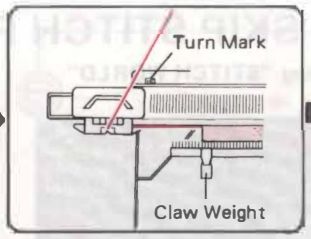


Knit a few rows in stocking stitch and place the K-Carriage outside the left Turn Mark. Hang the Claw Weight evenly along the Cast-on Comb.

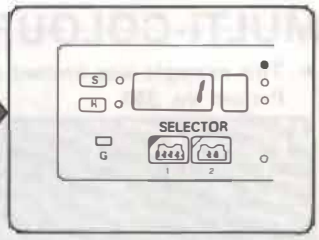

Program your pattern. (An example is given.) (See p. 23.)


- **PATTERN KNITTING**

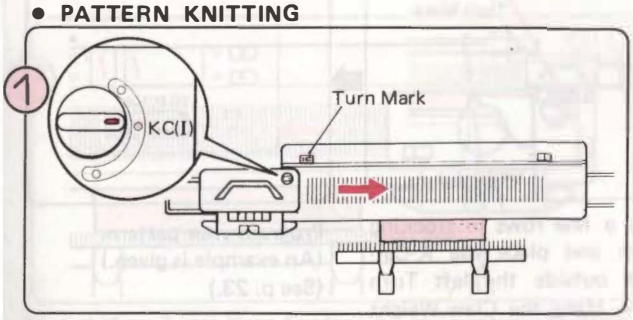


Set the Change Knob to KC (I).

Move the K-Carriage from left to right across the left Turn Mark.


*You only need to operate the K-Carriage once across the Turn Mark when you start pattern knitting.

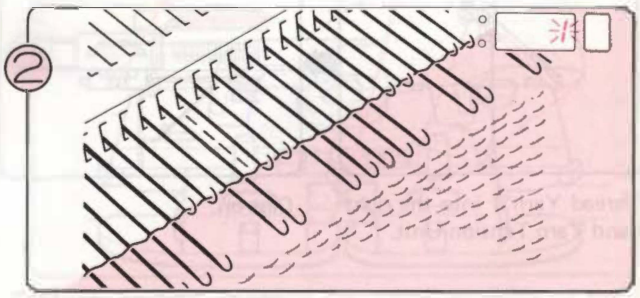

The needles are selected.
Number 1 flashes on and off in the Display to tell you to knit the first row of the pattern.

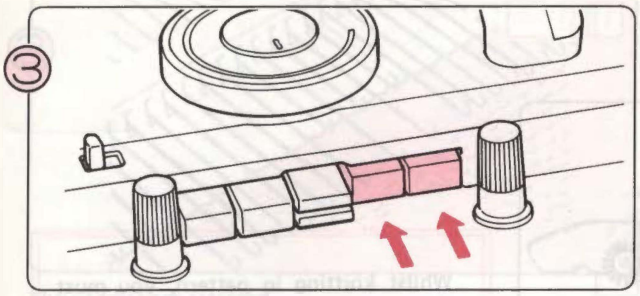


Push both Part Buttons at the same time.

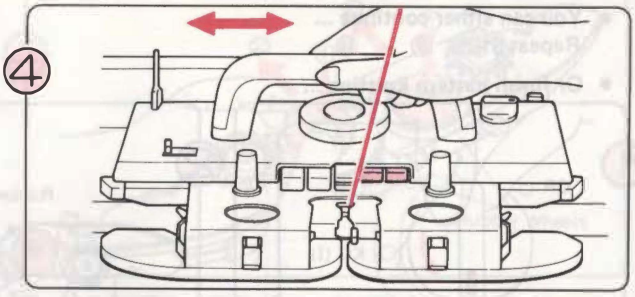


Move the K-Carriage back and forth. You are knitting in Skip Stitch Pattern. The number in the Display tells you the row you are going to knit next.

- **You can either continue:**
  Repeat Steps ④ – ⑤ .
- **Or finish pattern knitting ...**

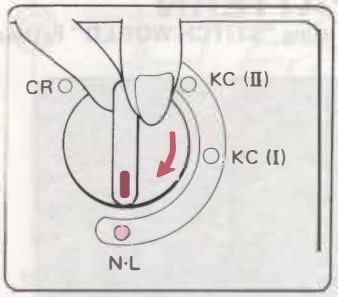

Set the Change Knob to N·L.
The Cam Buttons will be automatically released.

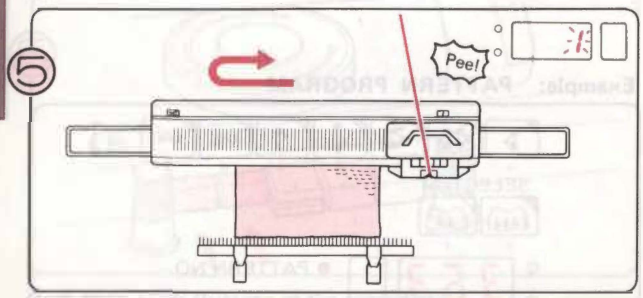


Knit in pattern until you hear the sound "Pee!". If you are operating the K-Carriage from right to left when you hear the sound, finish that row and knit one more row.
The Number 1 flashes on and off in the Display.


Whilst knitting in pattern, you must take the K-Carriage past the centre of the machine (Green 1 needle) on every row.

MULTI-COLOUR SKIP STITCH PATTERN


- **This example was knitted using "STITCH WORLD" Pattern No. 383.**

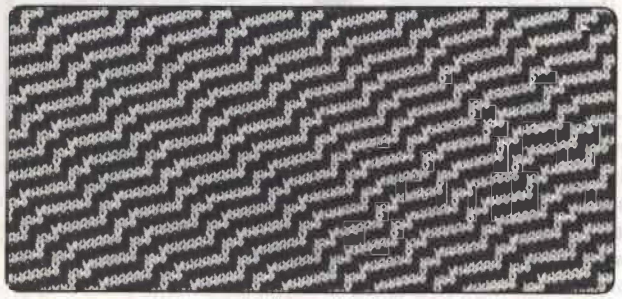


Example: PATTERN PROGRAM

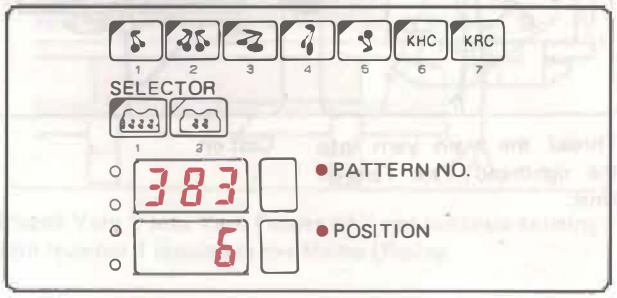


- **BEFORE STARTING PATTERN KNITTING**

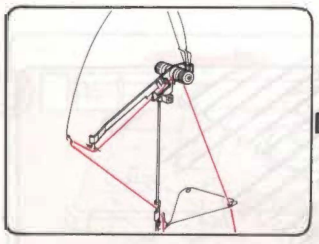


Thread Yarn 1 into the right-hand Yarn Tension Unit.

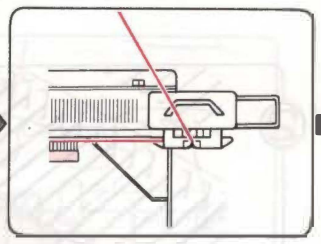

Cast on.

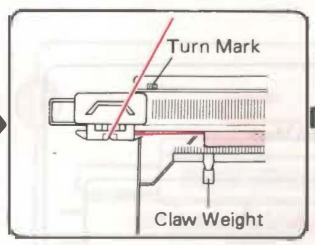


Knit a few rows in stocking stitch and place the K-Carriage outside the left Turn Mark. Hang the Claw Weight evenly along the Cast-on comb.

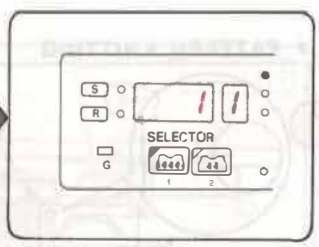


Program your pattern. (An example is given.) (See p. 23.)

This pattern is worked the same as Skip Stitch Pattern, except the yarn is changed according to the numbers in the Memo Display. Pattern No. 383 requires yarn in two colours (colour 1 and colour 2) and these are represented by the Number 1 and 2 in the Memo Display. So, to start, decide which yarn corresponds to which number.

• PATTERN KNITTING

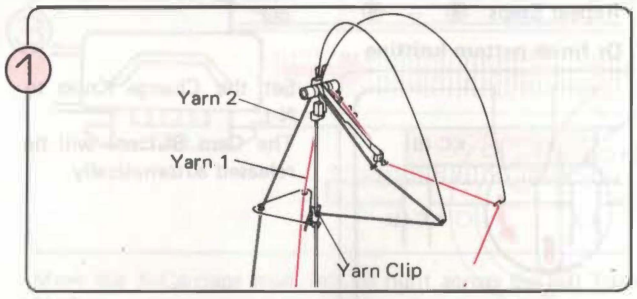


Thread Yarn 2 into the lefthand Yarn Tension Unit.

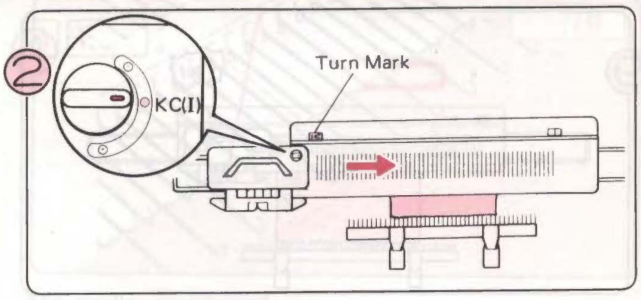


Set the Change Knob to KC (I).

Move the K-Carriage from left to right across the left Turn Mark.


*You only need to operate the K-Carriage once across the Turn Mark when you start pattern knitting.

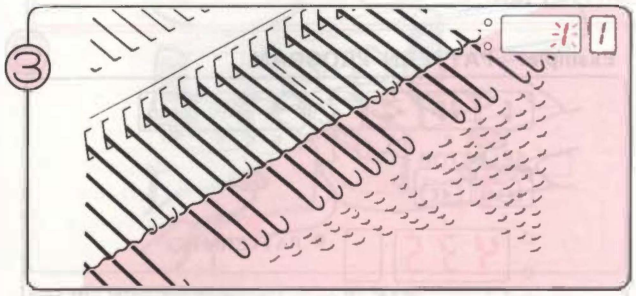


The needles are selected. Number 1 flashes on and off in the Display to tell you to knit the first row of the pattern. Number 1 in the Memo Display tells you to knit with Yarn 1.

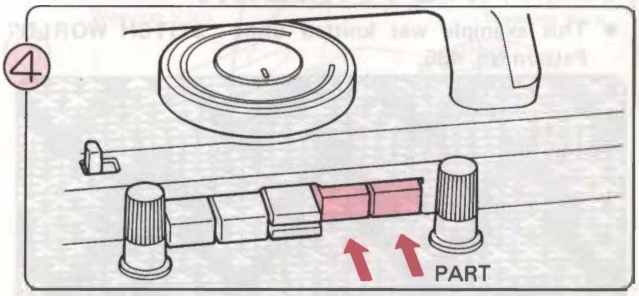

Push both Part Buttons at the same time.

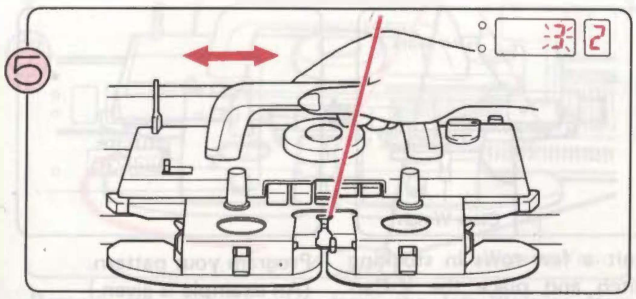


Move the K-Carriage back and forth until the Number 2 appears in the Memo Display. Number 3 in the Display and Number 2 in the Memo Display tell you to knit the third row with Yarn 2.

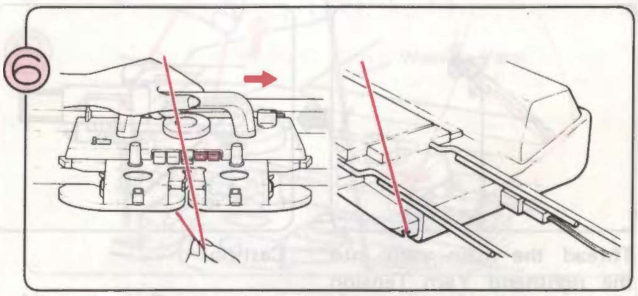


Take Yarn 1 out of Yarn Feeder "A". If you slide the K-Carriage slightly to the right the yarn can be removed easily.


Hook Yarn 1 around the notch at the end of your machine.

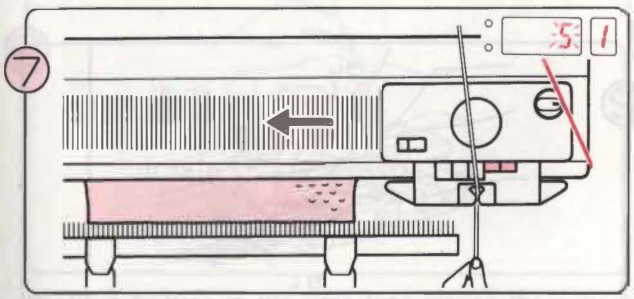

Thread Yarn 2 into Yarn Feeder "A" and continue knitting until Number 1 appears in the Memo Display.

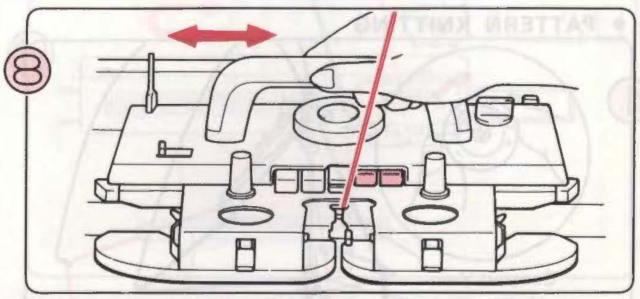


Continue knitting, changing the yarns according to the number in the Memo Display. (When you change the yarns, take care not to cross them over each other.)

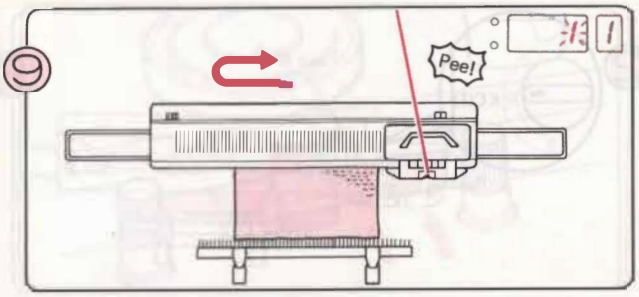


Knit in pattern until you hear the sound "Pee!". If you are operating the K-Carriage from right to left when you hear the sound, finish the row and knit one more row. Number 1 flashes on and off in the Display. You have now knitted one complete pattern in length.

WEAVING PATTERN

- **This example was knitted using "STITCH WORLD" Pattern No. 435.**

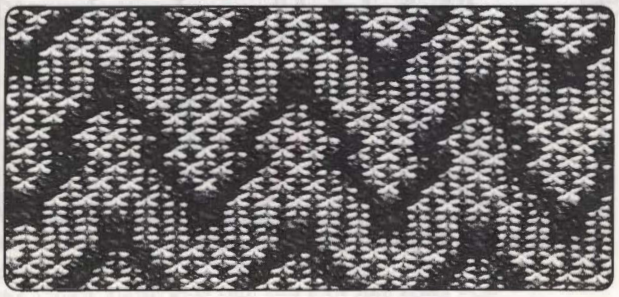


- **You can either continue ...**
  Repeat Steps ⑨ – ⑨ .
- **Or finish pattern knitting ...**

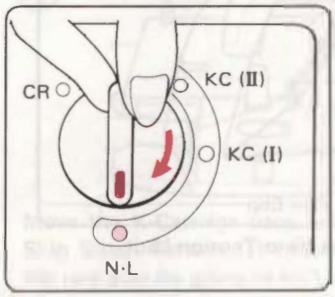


Set the Change Knob to N·L.
The Cam Buttons will be released automatically.

Whilst knitting in pattern, you must take the K-Carriage past the centre of the machine (Green 1 needle) on every row.


Example: PATTERN PROGRAM

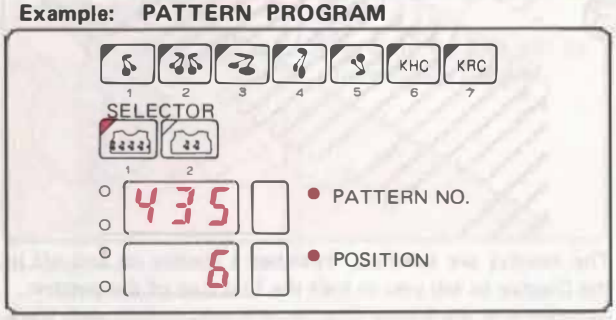


BEFORE STARTING PATTERN KNITTING

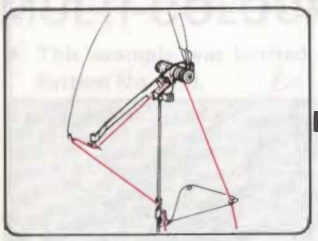


Thread the main yarn into the righthand Yarn Tension Unit.

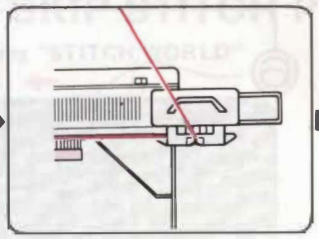

Cast on.

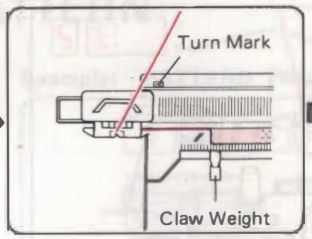


Knit a few rows in stocking stitch and place the K-Carriage outside the left Turn Mark. Hang the Claw Weight evenly along the Cast-on Comb.

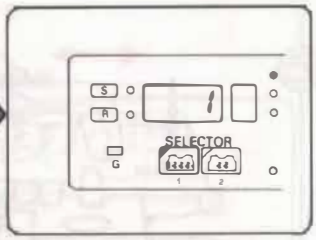


Program your pattern. (An example is given.) (See p. 23.)

Pattern No. 435 requires two types of yarn – the main yarn and the weaving yarn. A better effect will result if you choose a weaving yarn that is thicker than the main yarn.

- **PATTERN KNITTING**

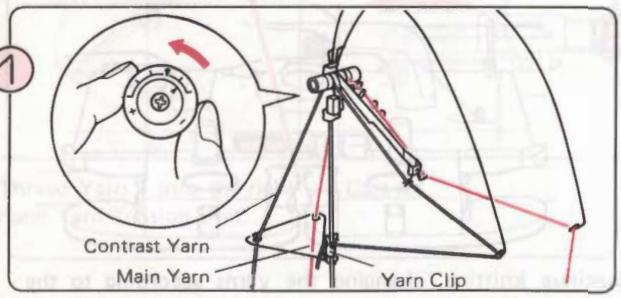

Thread the weaving yarn into the left Yarn Tension Unit. Adjust the Tension Disc as shown according to the thickness of the weaving yarn.

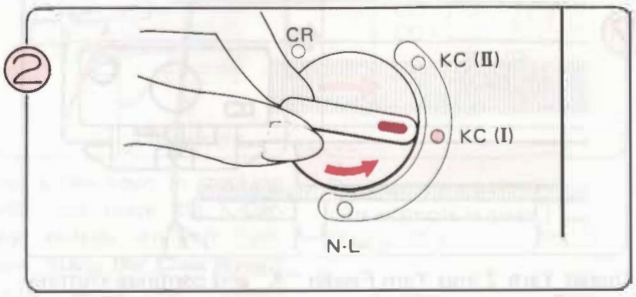

Set the Change Knob to KC (I).