

TUCK STITCH PATTERN


- **This example was knitted using "STITCH WORLD" Pattern No. 240.**

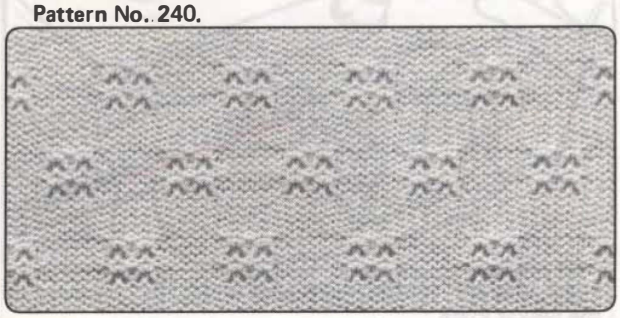


Example: PATTERN PROGRAM

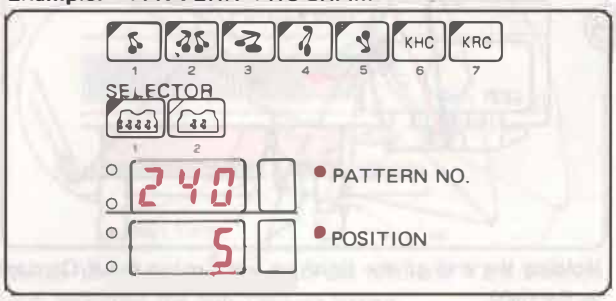


- **BEFORE STARTING PATTERN KNITTING**

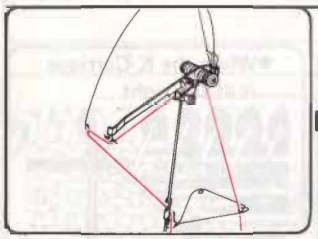


Thread the main yarn into the righthand Yarn Tension Unit.

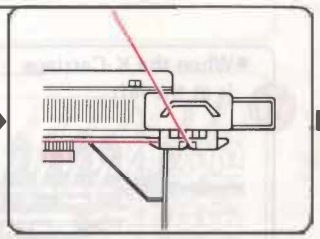

Cast on.

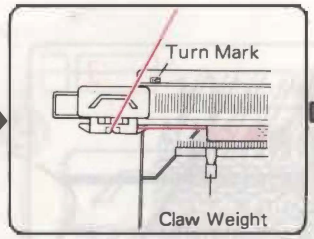


Knit a few rows in stocking stitch and place the K-Carriage outside the left Turn Mark.
Hang the Claw Weight evenly along the Cast-on Comb.

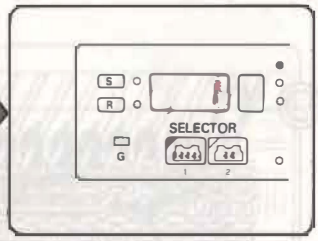


Program your pattern.


- **PATTERN KNITTING**

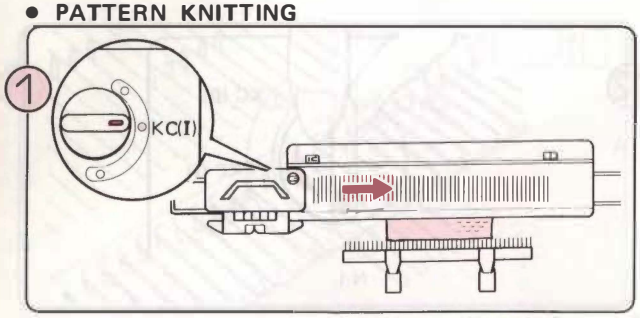


Set the Change Knob to KC (I). Move the K-Carriage from left to right across the left Turn Mark.
*You only need to operate the K-Carriage once across the Turn Mark when you start pattern knitting.

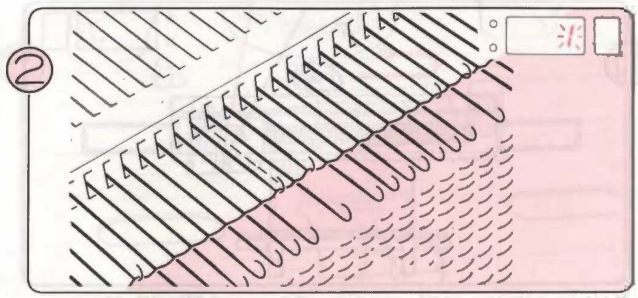


The needles are selected.
Number 1 flashes on and off in the Display to tell you to knit the first row of the pattern.

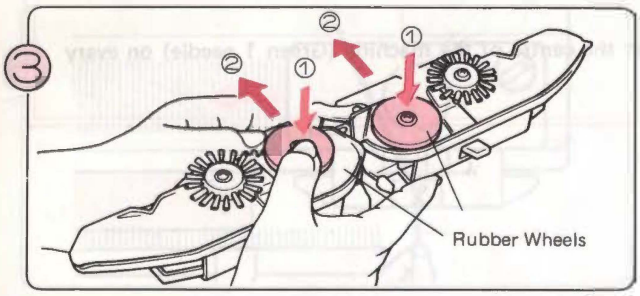

Remove the Sinker Plate Assembly from the K-Carriage and turn it over. Put the Rubber Wheels into working position ② as shown. Attach the Sinker Plate Assembly back on the K-Carriage again.

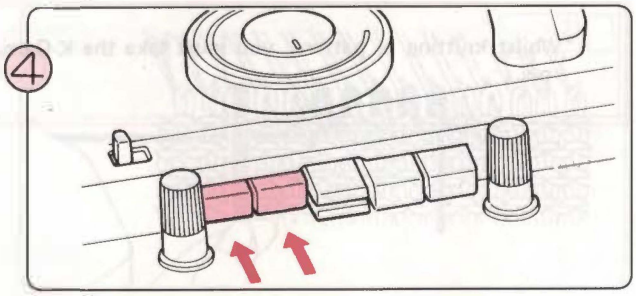


Push both Tuck Buttons at the same time.

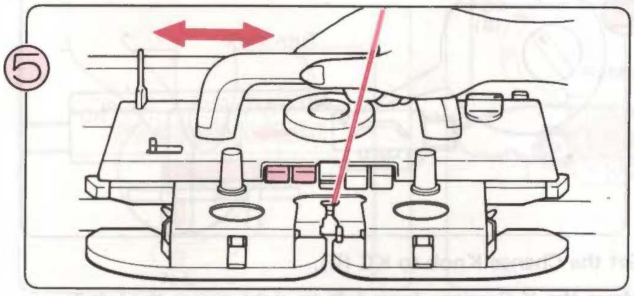


Move the K-Carriage back and forth. You are now knitting in Tuck Stitch Pattern.
The number in the Display tells you the number of the row you are going to knit next.


- **You can either continue ...**
  Repeat Steps ⑤ – ⑥ .
- **Or finish pattern knitting ...**

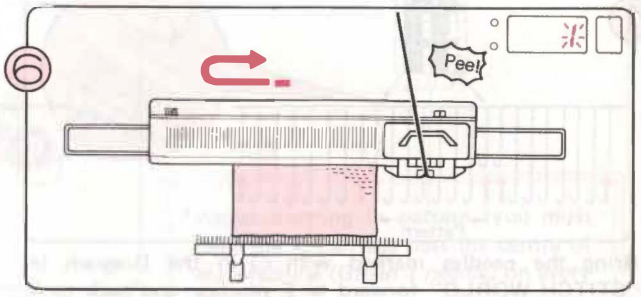

Knit in pattern until you hear the sound "Pee!". If you are operating the K-Carriage from right to left when you hear the sound, finish the row and knit one more row.
Number 1 flashes on and off in the Display. You have now knitted one complete pattern in length.

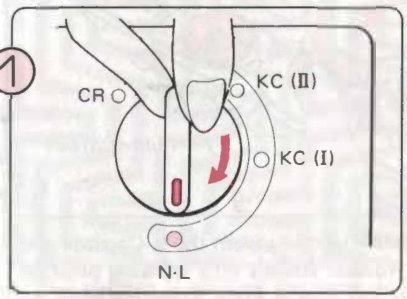

Set the Change Knob to N·L. The Cam Buttons will be released automatically.

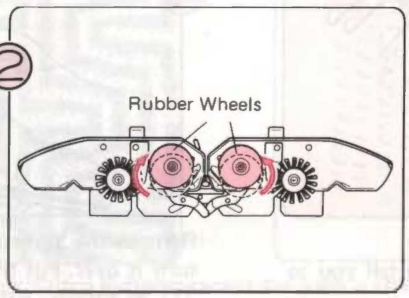

Place the Rubber Wheels in non-working position.


Whilst knitting in pattern, you must take the K-Carriage past the centre of the machine (Green 1 needle) on every row.

OPEN TUCK STITCH PATTERN


- **This example was knitted using "STITCH WORLD" Pattern No. 292.**




Example: PATTERN PROGRAM

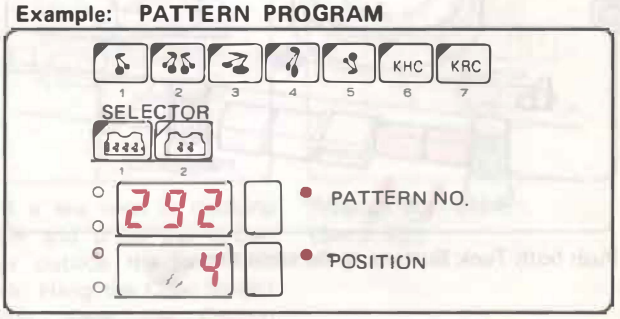


- **BEFORE STARTING PATTERN KNITTING**

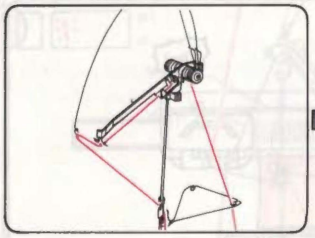


Thread main Yarn into the righthand Yarn Tension Unit.

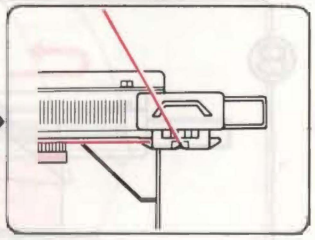

Cast on.

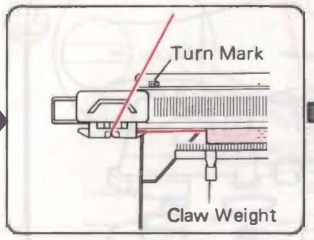


Knit a few rows in stocking stitch and place the K-Carriage outside the left Turn Mark. Hang the Claw Weight evenly along the Cast-on Comb.

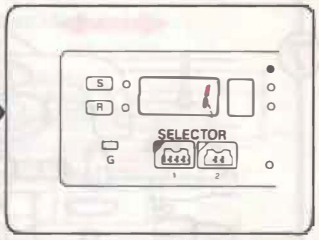


Program your pattern.
(See p. 23.)

• PATTERN KNITTING

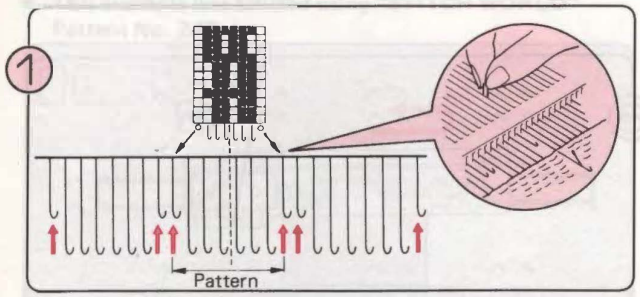


Bring the needles marked with ○ in the Diagram in "STITCH WORLD" forward to E position and back to A position.

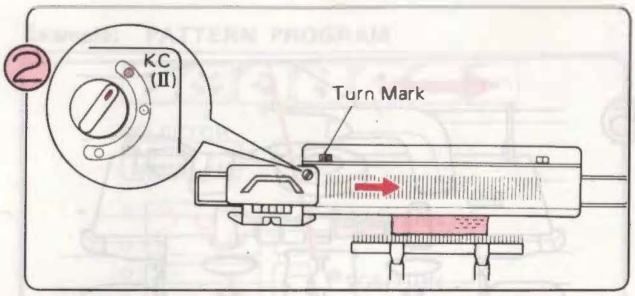


Set the Change Knob to KC (II).

Move the K-Carriage from left to right across the left Turn Mark.


*You only need to operate the K-Carriage once across the Turn Mark when you start pattern knitting.

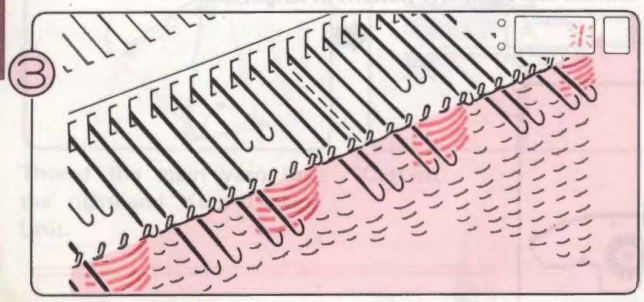


The needles are selected.
Number 1 flashes on and off in the Display to tell you to knit the first row of the pattern.

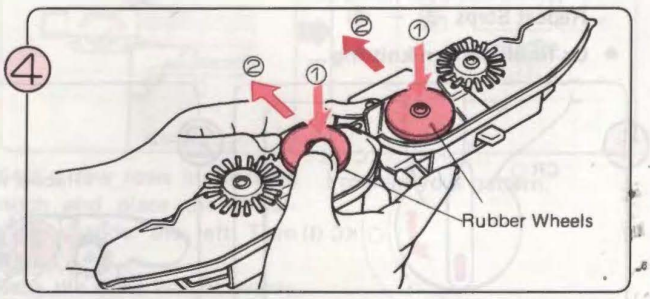


Remove the Sinker Plate Assembly from the K-Carriage and turn it over. Put the Rubber Wheels into working position ② as shown. Attach the Sinker Plate Assembly back on the K-Carriage again.

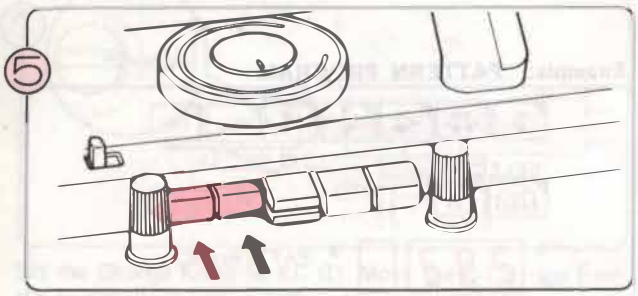


Push both Tuck Buttons at the same time.

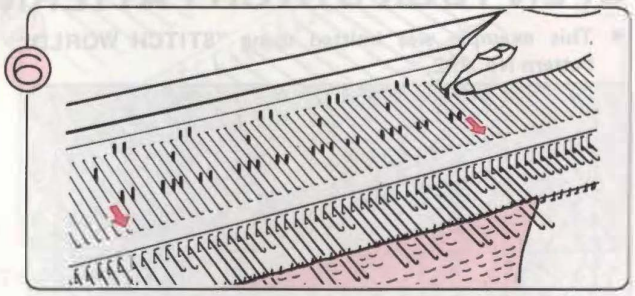

Bring the end needles forward to D position if they are not already in this position.

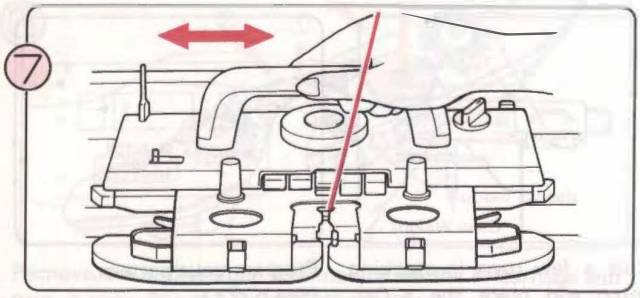


Move the K-Carriage back and forth. You are knitting in Open Tuck Stitch Pattern. (Don't forget the end needles must always be in D position). The number in the Display tells you the row you are going to knit next.

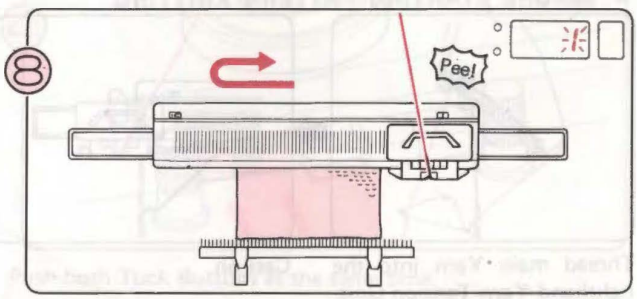


Knit in pattern until you hear the sound "Pee!". If you are operating the K-Carriage from right to left when you hear the sound, finish that row and knit one more row.
The number 1 flashes on and off in the Display.

- **You can either continue ...**
  Repeat Steps ⑦ – ⑧ .
- **Or finish pattern knitting ...**

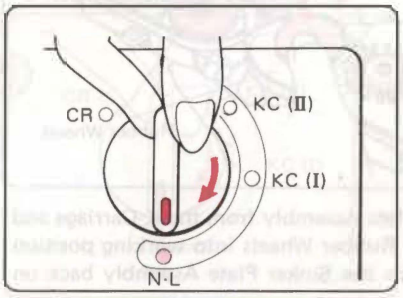

Set the Change Knob to N·L.
The Cam Buttons will be automatically released.

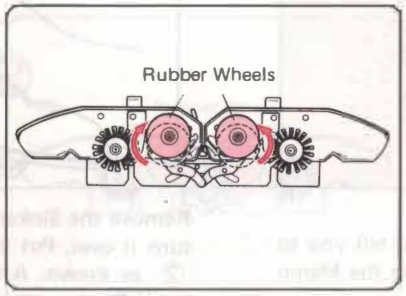


Place the Rubber Wheels in non-working position.


*Whilst knitting in pattern, you must take the K-Carriage past the centre of the machine (Green 1 needle) on every row.

MULTI-COLOUR TUCK STITCH PATTERN

- **This example was knitted using "STITCH WORLD" Pattern No. 296.**

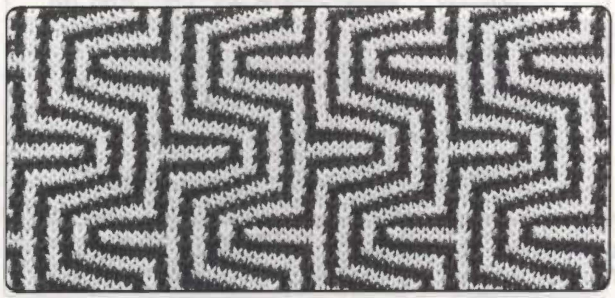


Example: PATTERN PROGRAM

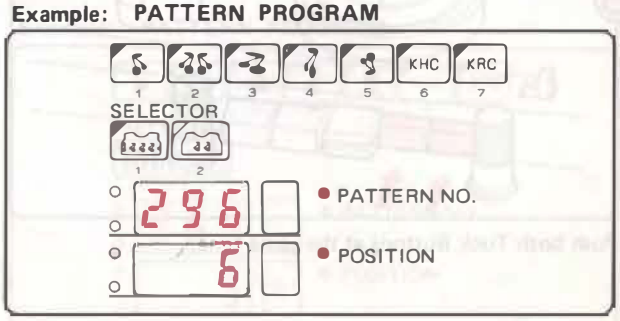


- This pattern is worked the same as Tuck Stitch Pattern, except the yarn is changed according to the number in the Memo Display.
  Pattern No. 296 requires yarn in two colours (colour 1 and colour 2) and these are represented by the numbers 1 and 2 in the Memo Display. So, to start, decide which yarn corresponds to which number.


BEFORE STARTING PATTERN KNITTING

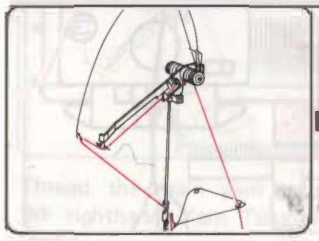


Thread the yarn 1 into the righthand Yarn Tension Unit.

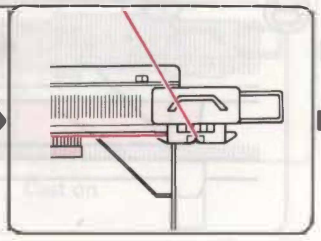

Cast on.

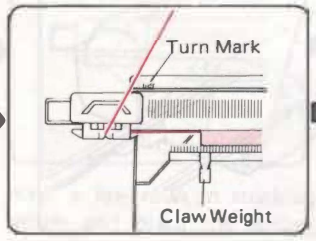


Knit a few rows in stocking stitch and place the K-Carriage outside the left Turn Mark. Hang the Claw Weight evenly along the Cast-on Comb.

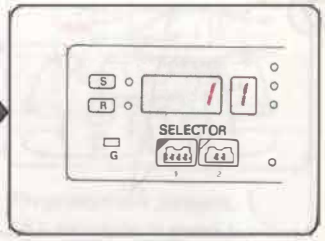


Program your pattern. (See p. 23.)


PATTERN KNITTING

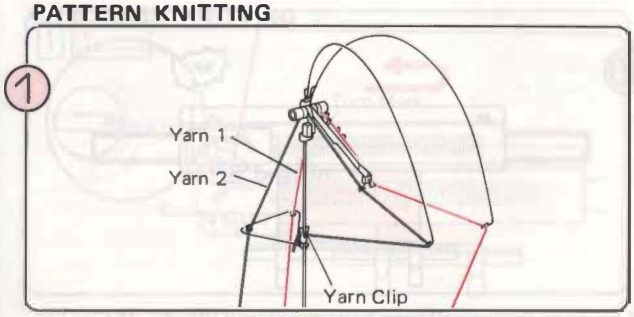


Thread Yarn 2 into the lefthand Yarn Tension Unit.

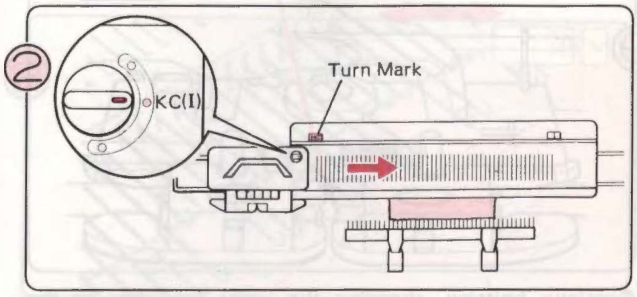


Set the Change Knob to KC (I).
Move the K-Carriage from left to right across the left Turn Mark.
*You only need to operate the K-Carriage once across the Turn Mark when you start pattern knitting.

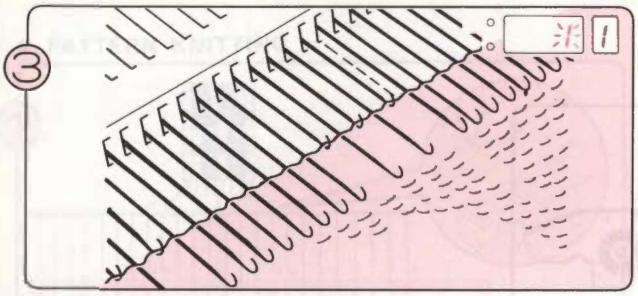


The needles are selected.
Number 1 flashes on and off in the Display to tell you to knit the first row of the pattern. Number 1 in the Memo Display tells you to knit with Yarn 1.

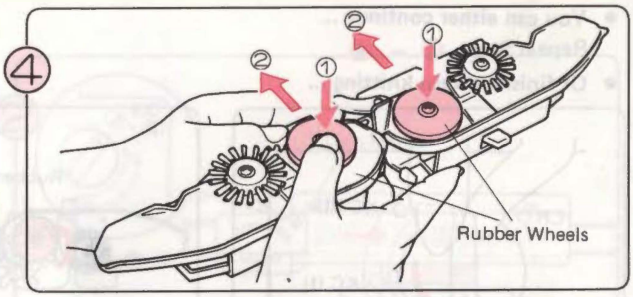


Remove the Sinker Plate Assembly from the K-Carriage and turn it over. Put the Rubber Wheels into working position ② as shown. Attach the Sinker Plate Assembly back on the K-Carriage again.

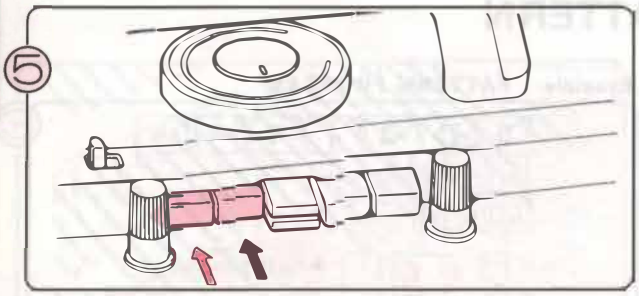

Push both Tuck Buttons at the same time.

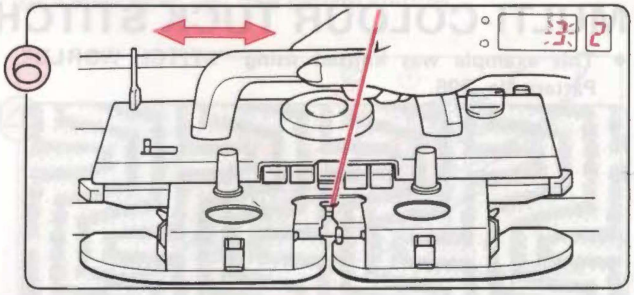


Move the K-Carriage back and forth until the number 2 appears in the Memo Display. Number 3 in the Display and Number 2 in the Memo Display tell you to knit the third row with Yarn 2.

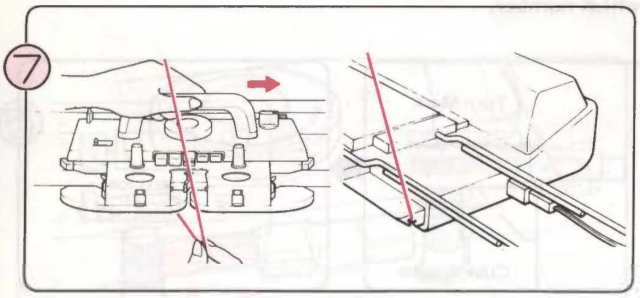


Take Yarn 1 out of Yarn Feeder "A". If you slide the K-Carriage slightly to the right the yarn can be removed easily.


Hook Yarn 1 around the notch at the end of your machine.

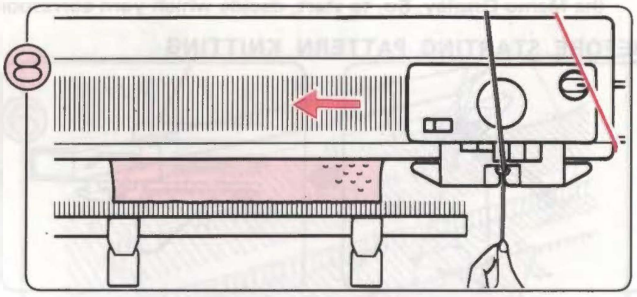

Thread Yarn 2 into Yarn Feeder "A" and continue knitting until Number 1 appears in the Memo Display.

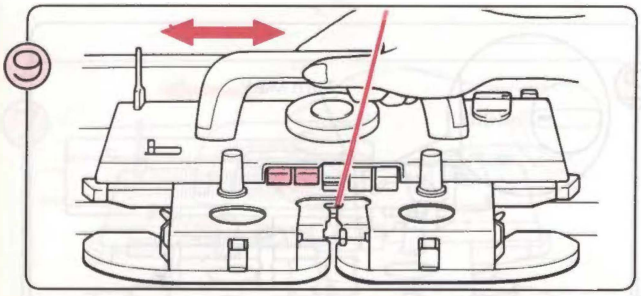

Continue knitting, changing the yarns according to the number in the Memo Display. (When you change the yarns, take care not to cross them over each other.)

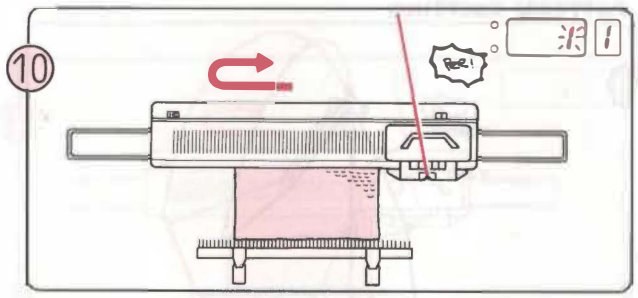

Knit in pattern until you hear the sound "Pee!". If you are operating the K-Carriage from right to left when you hear the sound, finish the row and knit one more row. Number 1 flashes on and off in the Display. You have now knitted one complete pattern in length.