



Knit in pattern until you hear the sound "Pee!". If you are operating the K-Carriage from right to left when you hear the sound, finish the row and knit one more row. Number 1 flashes on and off in the Display. You have now knitted one complete pattern in length.

WEAVING PATTERN

- **This example was knitted using "STITCH WORLD" Pattern No. 435.**

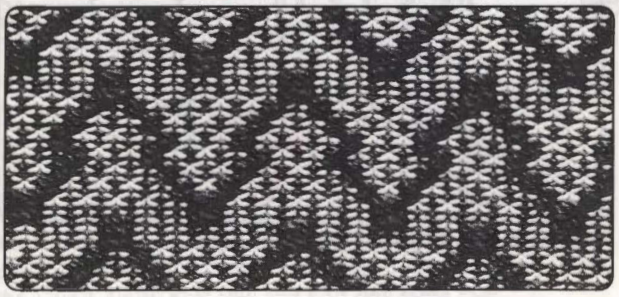


- **You can either continue ...**
  Repeat Steps ⑨ – ⑨ .
- **Or finish pattern knitting ...**

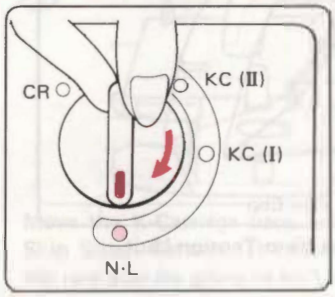


Set the Change Knob to N·L.
The Cam Buttons will be released automatically.

Whilst knitting in pattern, you must take the K-Carriage past the centre of the machine (Green 1 needle) on every row.


Example: PATTERN PROGRAM

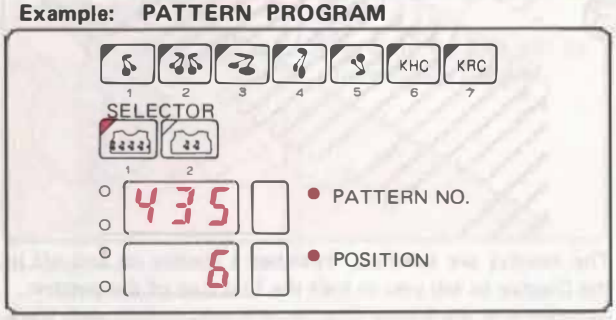


BEFORE STARTING PATTERN KNITTING

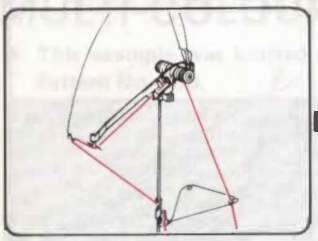


Thread the main yarn into the righthand Yarn Tension Unit.

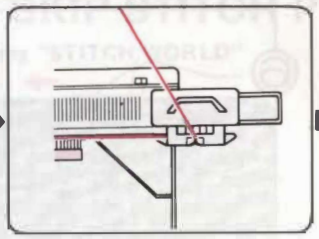

Cast on.

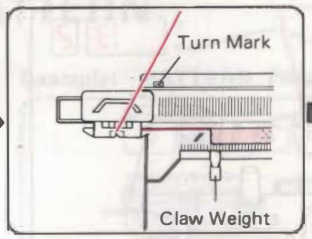


Knit a few rows in stocking stitch and place the K-Carriage outside the left Turn Mark. Hang the Claw Weight evenly along the Cast-on Comb.

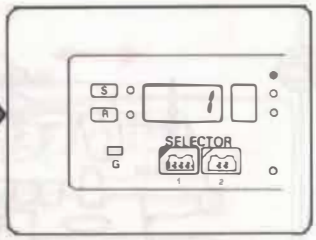


Program your pattern. (An example is given.) (See p. 23.)

Pattern No. 435 requires two types of yarn – the main yarn and the weaving yarn. A better effect will result if you choose a weaving yarn that is thicker than the main yarn.


- **PATTERN KNITTING**

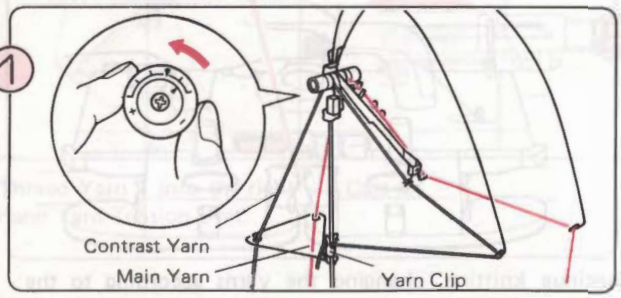


Thread the weaving yarn into the left Yarn Tension Unit. Adjust the Tension Disc as shown according to the thickness of the weaving yarn.

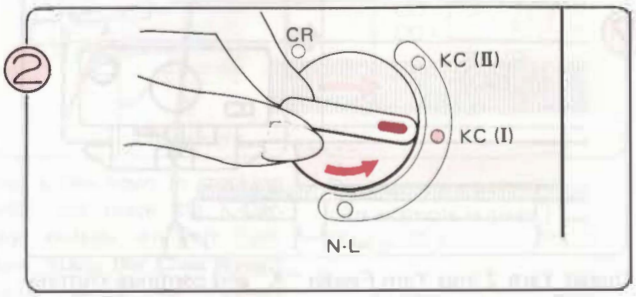


Set the Change Knob to KC (I).

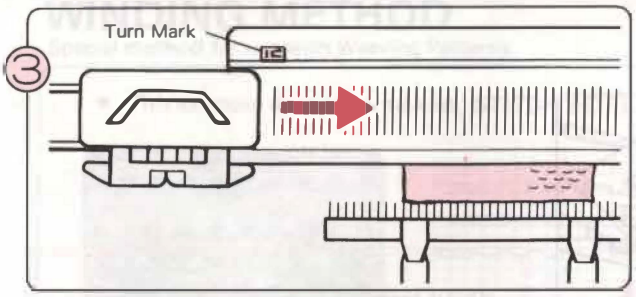


Move the K-Carriage from left to right across the left Turn Mark.
*You only need to operate the K-Carriage once across the Turn Mark when you start pattern knitting.

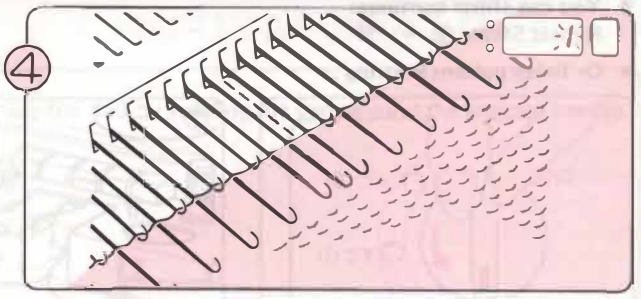


The needles are selected.
Number 1 flashes on and off in the Display to tell you to knit the first row of the pattern.

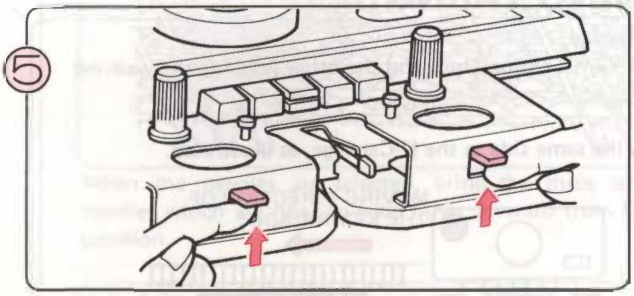


Set the Weaving Pattern Levers to W.T.

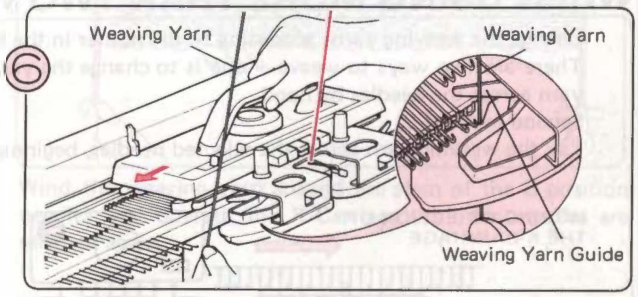


Hold the end of the weaving yarn with your left hand, and thread it into the Weaving Yarn Guide on the left side of the K-Carriage. Then move the K-Carriage across the needle-bed.
* Release the yarn end after knitting one row.

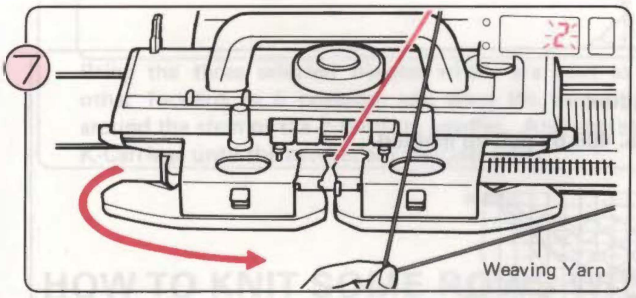


Remove the weaving yarn from the left Weaving Yarn Guide by moving the K-Carriage slightly to the left. Pass the weaving yarn under the K-Carriage to the righthand side.
Number 2 in the Display tells you to knit the second row of the pattern.

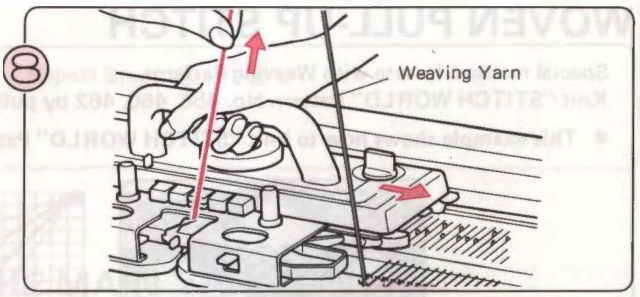

Move the K-Carriage to the right, pulling the main yarn upwards slightly – ensure that the weaving yarn is in the right Weaving Yarn Guide.

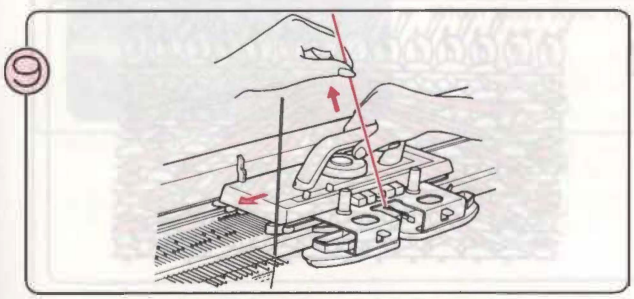


Continue knitting at the same time placing the weaving yarn into the left or right Weaving Yarn Guide according to the direction of the K-Carriage, and pulling the main yarn upwards slightly.

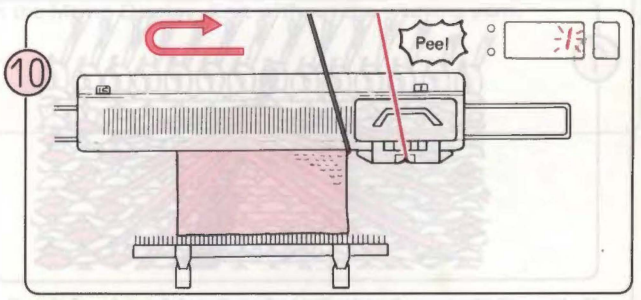


Knit in pattern until you hear the sound "Peel". If you are operating the K-Carriage from right to left when you hear the sound, finish that row and knit one more row.
The Number 1 flashes on and off in the Display.

- **You can either continue:**
  Repeat Steps ⑨ – ⑩ .
- **Or finish pattern knitting ...**

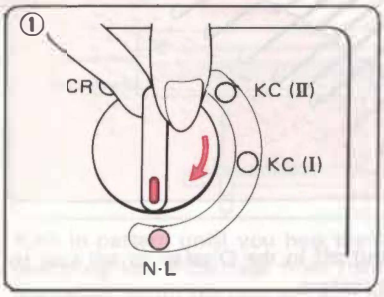

Set the Change Knob to N·L.

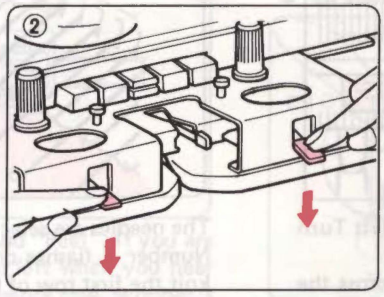


Set the Weaving Pattern Levers to N.


Whilst knitting in pattern, you must take the K-Carriage past the centre of the machine (Green 1 needle) on every row.

WHEN USING MORE THAN TWO WEAVING YARNS ...

Change the weaving yarns according to the numer in the Memo Display.
There are two ways to weave – one is to change the yarn in the Yarn Tension Unit, and the other is to lay the weaving yarn across the needles by hand.

Second method ...
Lay the weaving yarn across the selected needles, beginning from the same side as the K-Carriage, as illustrated.

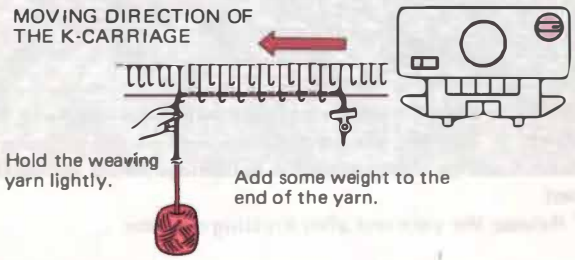


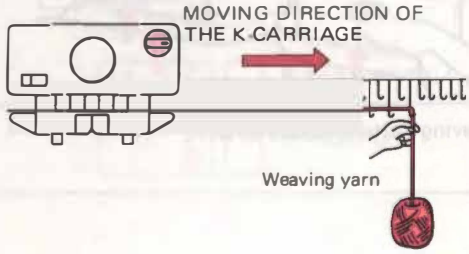



WOVEN PULL-UP STITCH

Special method for use with Weaving Patterns.
Knit "STITCH WORLD" Pattern No. 458, 460, 462 by pull-up method.


- **This example shows how to knit "STITCH WORLD" Pattern No. 460 by pull-up method.**

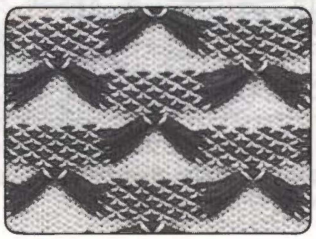

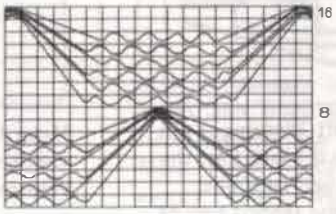

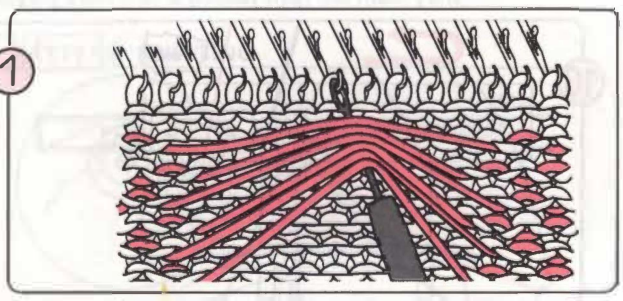

Knit until the number indicated at the right side of the diagram in "STITCH WORLD" appears in the Display.
Using your Transfer Tool, pick up the long weaving yarns which lie across the front of the stitches, and place them onto the needle shown. This is illustrated above.

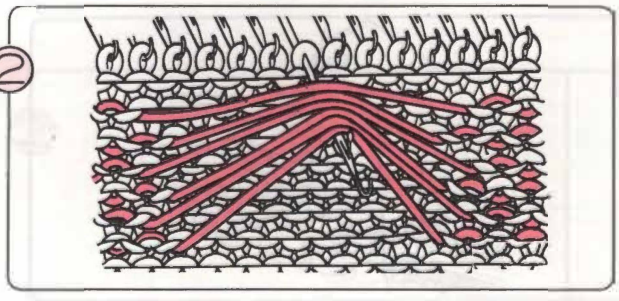



Now bring these needles forward to E position and continue knitting.


WINDING METHOD

Special method for use with Weaving Patterns.


- This example shows how to knit "STITCH WORLD" Pattern No. 463 by winding the yarn around the selected needles.

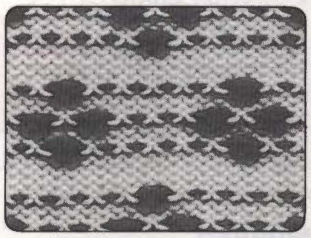

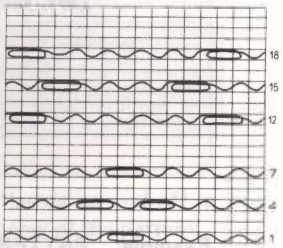


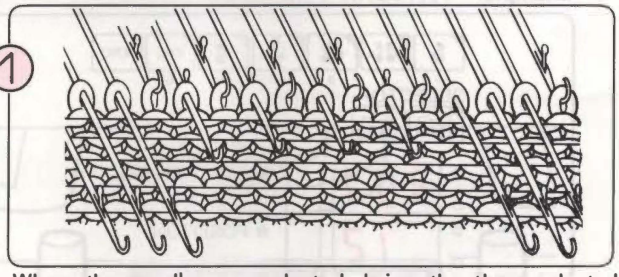① 

When the needles are selected, bring the three selected needles which are next to each other forward from D to E position.

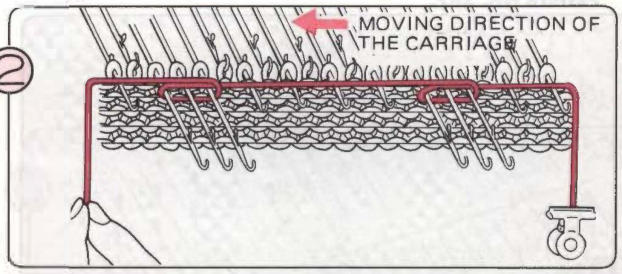② 

Wind the weaving yarn around the stem of the E position needles and operate the K-Carriage until the needles are selected again.

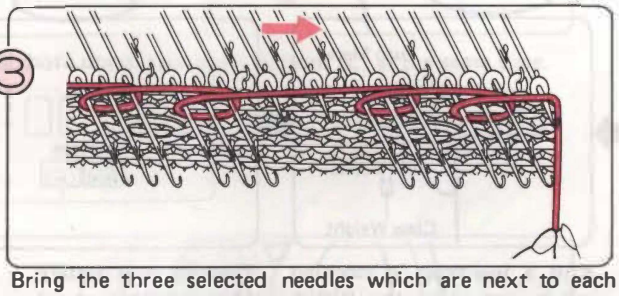
③ 

Bring the three selected needles which are next to each other forward to E position, and wind the weaving yarn around the stem of the E position needles. And operate the K-Carriage until the needles are selected again.

④

Repeat Steps ① – ③ .

HOW TO KNIT SOME ROWS WITH THE MAIN YARN ONLY.

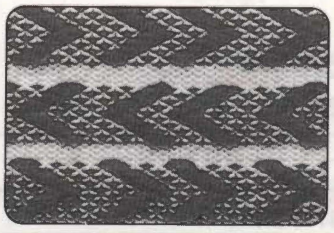

- **This example was knitted using "STITCH WORLD" Pattern No. 439.**

When the number appears in the Memo Display, you should knit using the weaving yarn.

When there is no number in the Memo Display, knit without the weaving yarn.