

INTARSIA KNITTING

With Intarsia Knitting there are no long floats at the back of the fabric, and several colours can be knitted in one row. Prepare sufficient separate balls of yarn according to the changes in the pattern and place these on the floor at your feet. Draw a diagram of your design.

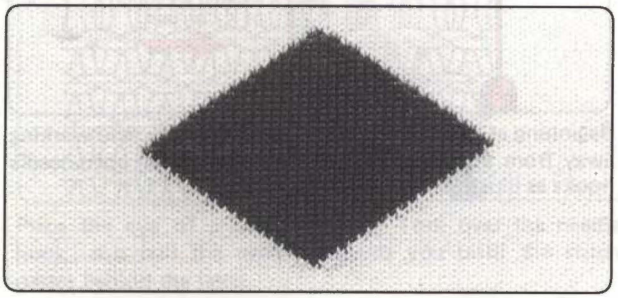


When you do Intarsia Knitting, the tension may differ about 1 and can even vary according to how firmly you hold the yarn with your hand. Bear in mind this possible difference when making your tension swatches.


• BEFORE STARTING PATTERN KNITTING

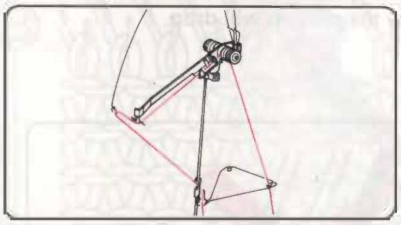

Thread the main yarn into the right-hand Yarn Tension Unit.

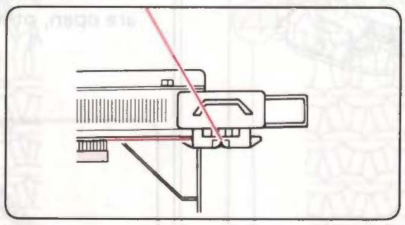


Cast on.

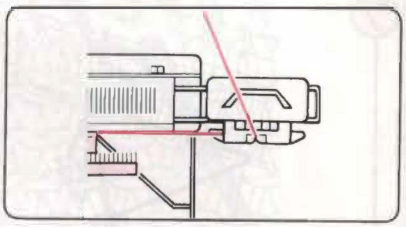


Knit a few rows in stocking stitch until you want to begin Intarsia Knitting, ending with K-Carriage at right.


• PATTERN KNITTING

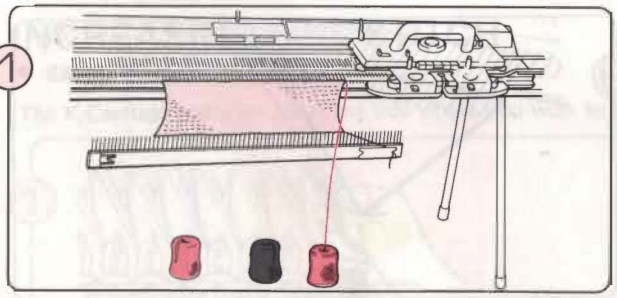


Take the yarn out of the Yarn Feeder and the Yarn Tension Unit. Prepare the other balls of yarn, and place them on the floor at your feet.

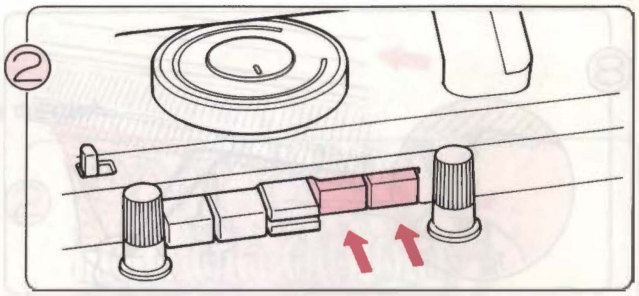


Push both Part Buttons at the same time.

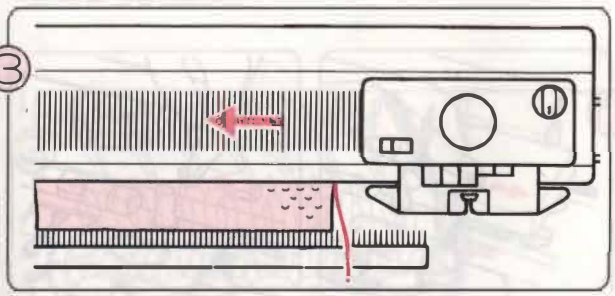


Move the K-Carriage once across the needlebed from right to left.

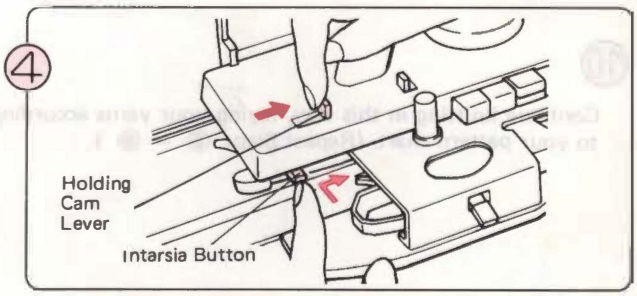


Set the Holding Cam Lever to I. To do this, slide the Holding Cam Lever to the right at the same time press in the Intarsia Button.

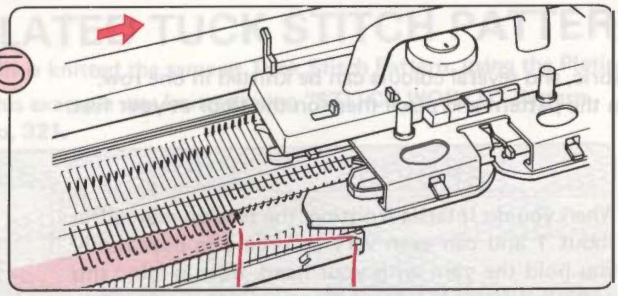

Move the K-Carriage from left to right, without knitting, to align the needles in D position. Make sure that all the latches are open. If not, open them. Wind the Row Counter and Knitleader back by 2 rows.

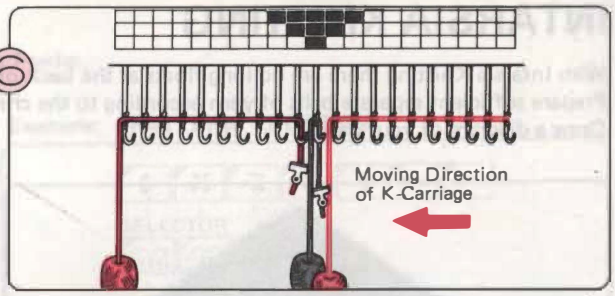



Beginning at the side nearest to the K-Carriage, and working away from the K-Carriage, lay the yarns in the open needle hooks as illustrated.

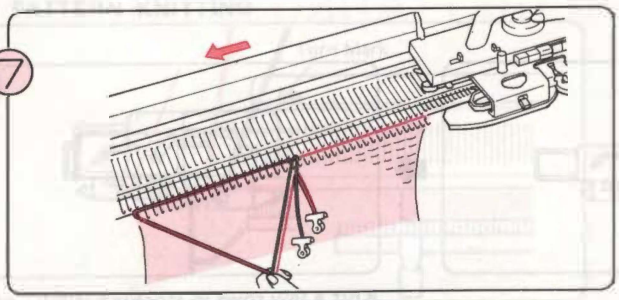


Move the K-Carriage slowly across the needlebed, at the same time gently pull the yarns downwards with your other hand to take up any looseness.

*When working Intarsia, always make sure the latches are open, otherwise the stitches will drop.

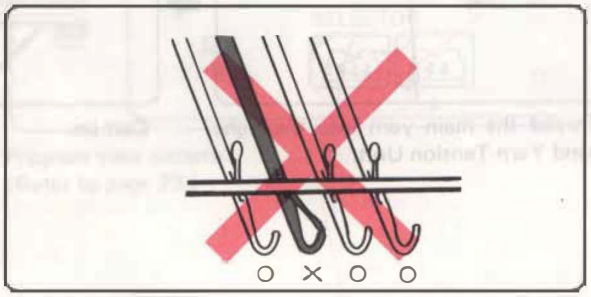

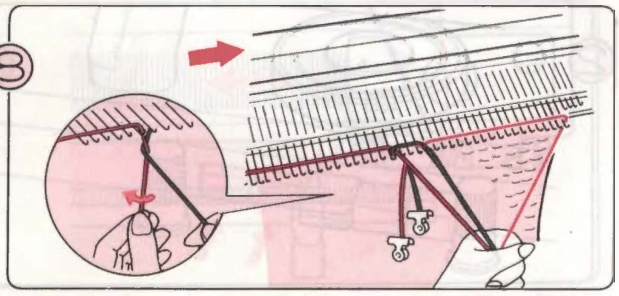


Working in the opposite direction (again away from the K-Carriage) lay the yarns in the open needle hooks for the next row. To avoid a hole appearing where the yarns meet, cross one over the other as illustrated. Now slowly move the K-Carriage across the needlebed.

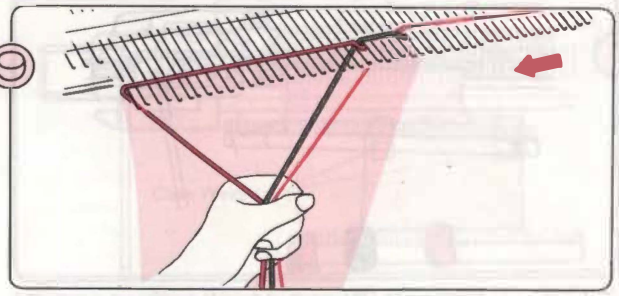

Lay the yarns and knit the third row.

Continue knitting in this way, laying your yarns according to your pattern chart. (Repeat Steps ⑧ – ⑨).

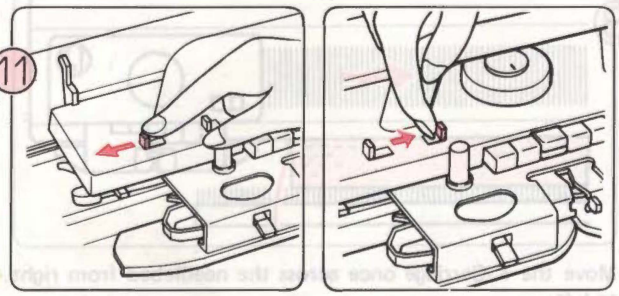

When you want to finish Intarsia Knitting, set the Holding Cam Lever to N and release the Cam Buttons with the Cam Button Release Lever.